1990-96 Mazda 626/MX-6 Chassis Schematics 1991-92 1993 START W/O BATTERY HOT AT ALL TIMES HOT IN START OR RUN THEFT DETERRENT MAIN FUSE METER HOT AT ALL TIMES **BATTERY** FUSE LINK 幸 IGNITION 80A (NON-TURBO) 10A FUSE 100A (TURBO) LINK 40A IGNITION IGNITION SWITCH START SWITCH • ACCY START ACCY LOCK RUN LOCK W/OUT A/T M/TTHEFT W/THEFT DETERRENT DETERRENT INHIBITOR CLUTCH SWITCH SWITCH PARK STARTER CUT RELAY A/T M/TTO STARTER CENTRAL PROCESSING UNIT W/OUT W/THEFT THEFT DETERRENT DETERRENT A/T M/TINHIBITOR STARTER SWITCH INTERLOCK HOT AT ALL TIMES PARK HOT IN START OR RUN HOT AT ALL TIMES SWITCH MAIN METER FUSE FUSE FUSE 30 A 80A 15A (90-92 NON-TURBO) 100A (ALL OTHERS) EXCEPT 1991-92 CHARGE NON-TURBO A/T M/T**INDICATOR** GENERATOR STARTER VOLTAGE REGULATOR