1992-98 Mazda MX-3/Millennia Chassis Schematics 1992-93 1.6L 1992-93 1.8L, 1995-98 MILLENIA 2.5L HOT IN START OR RUN HOT AT ALL TIMES HOT AT ALL TIMES 1994-95 FUEL INJ ENGINE FUSE ENGINE HOT AT ALL TIMES HOT AT ALL TIMES FUSE LINK FUSE FUEL INJ ENGINE 10A 15A 30A FUSE FUSE 15A LINK MAIN RELAY EGI MAIN RELAY TO TO ENGINE ENGINE CONTROLS CONTROL UNIT FUEL PUMP RELAY FUEL PUMP RELAY CIRCUT OPENING RELAY TO ECU TO ENGINE CONTROL UNIT FUEL FUEL PUMP FUEL PUMP TO PUMP ENGINE CONTROL UNIT HOT IN START OR RUN LIGHT FUSE 15A TAIL LIGHT RELAY COMBINATION SWITCH PARK R/B R/B R/BR/B RIGHT REAR SIDE RIGHT Front LEFT REAR RIGHT LEFT FRONT LEFT FRONT LICENSE PLATE RIGHT TAIL LIGHT LEFT TAIL LIGHT 6 6 6 6 FRONT PARKING Light SIDE SIDE PARKING SIDE LIGHTS MARKER MARKER LIGHT MARKER MARKER LIGHT LIGHT LIGHT LIGHT

DIAGRAM 45