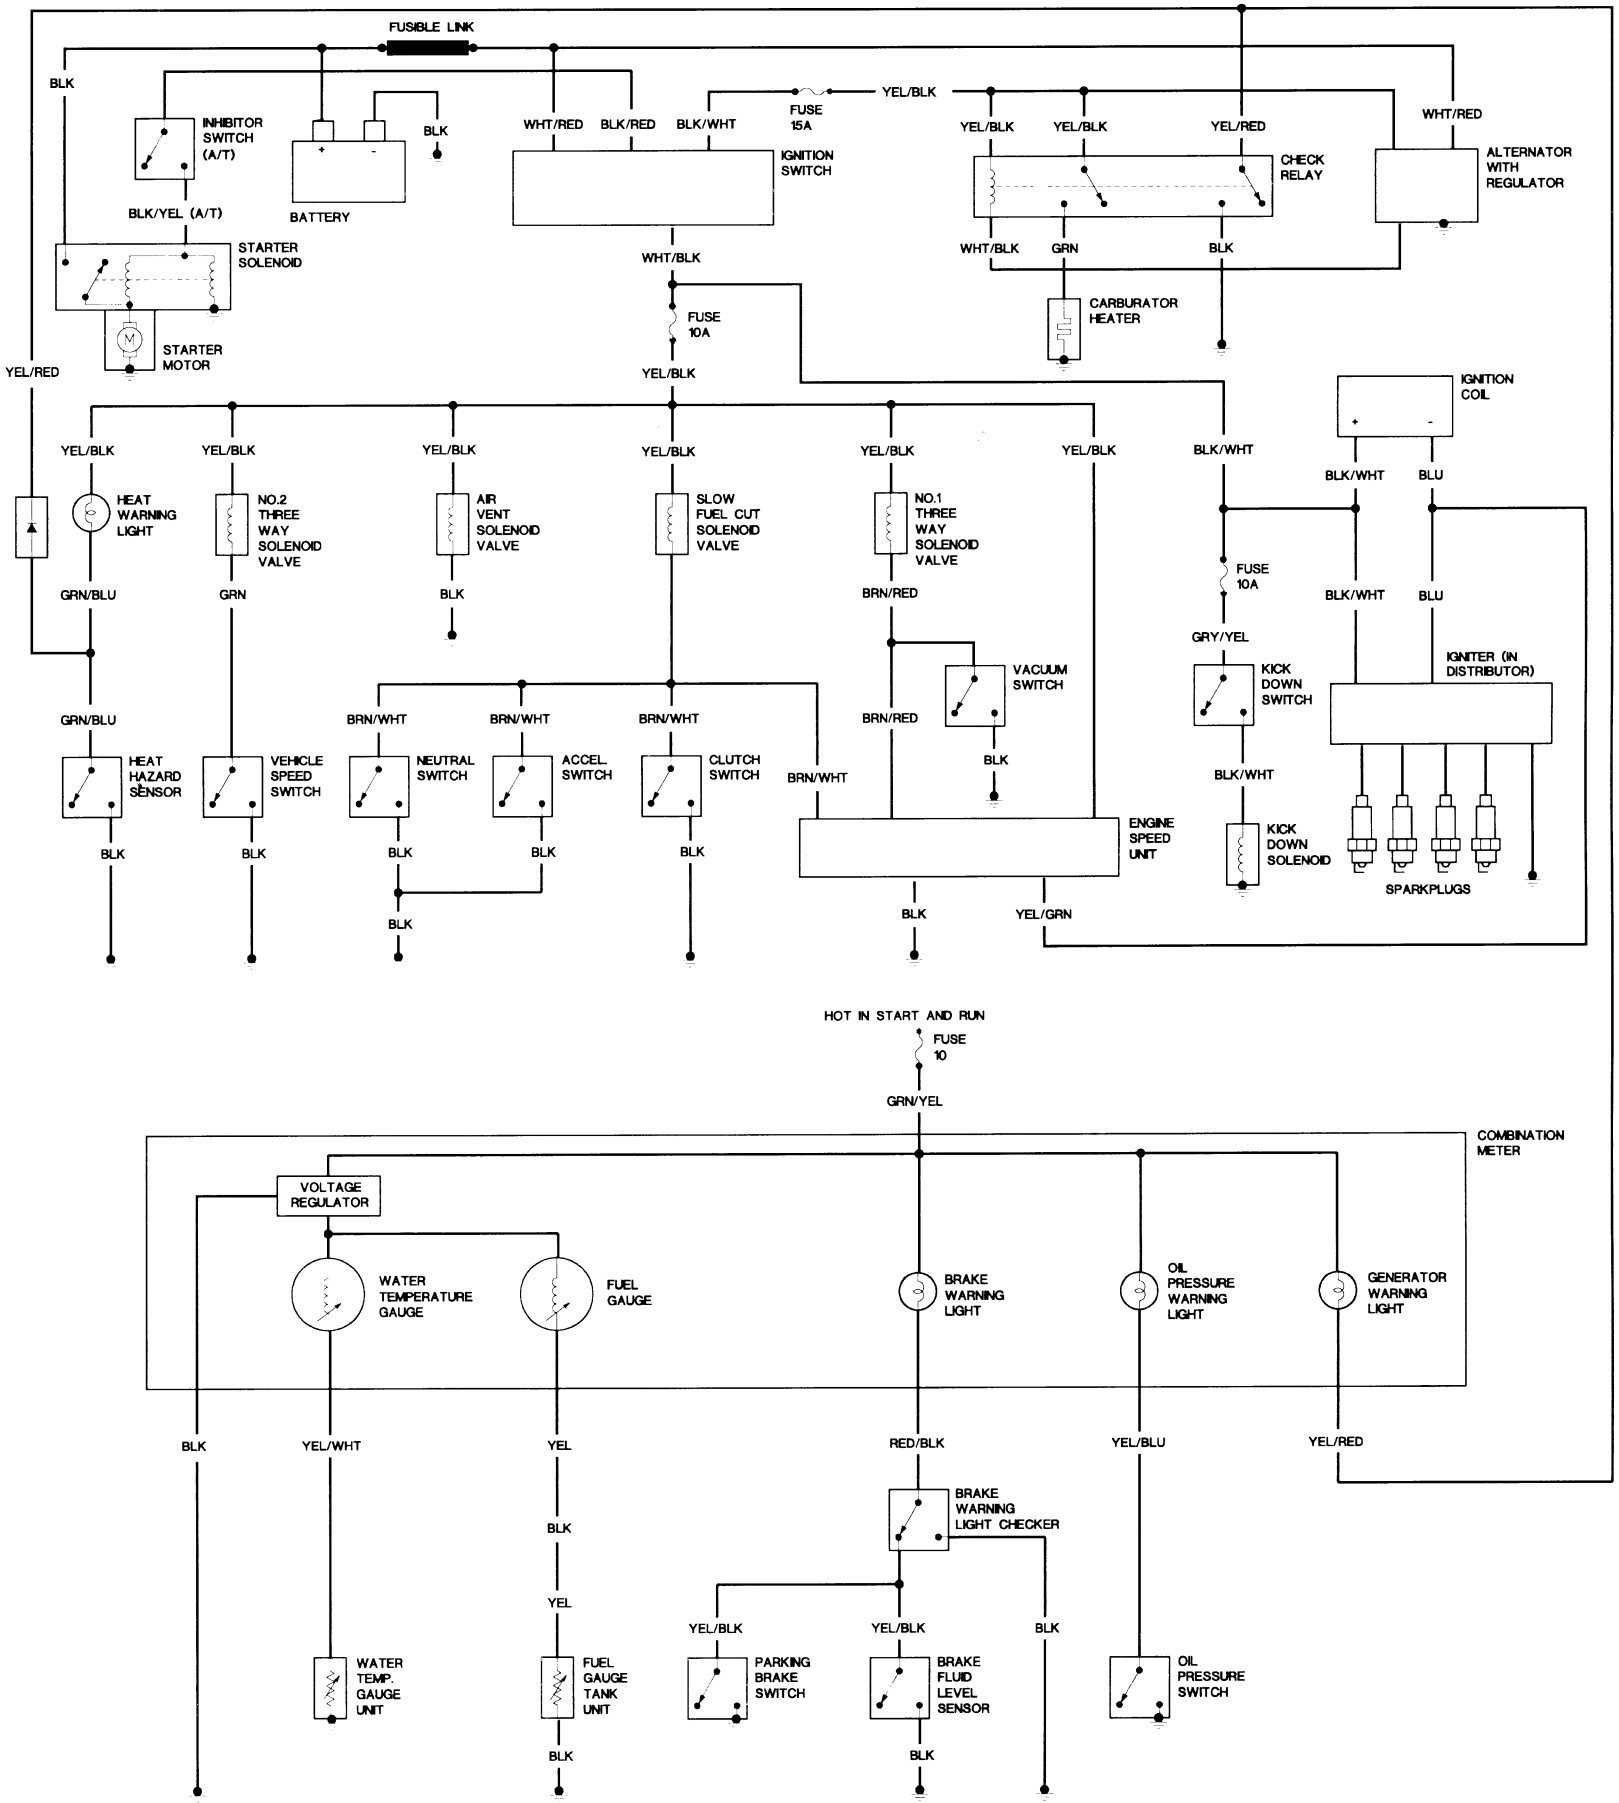
FUSIBLE LINK
BLK
INHIBITOR SWITCH (A/T)
BLK/YEL (A/T)
STARTER SOLENOID
STARTER MOTOR
YEL/RED
BATTERY
BLK
WHT/RED
BLK/RED
BLK/WHT
FUSE 15A
YEL/BLK
IGNITION SWITCH
WHT/BLK
FUSE 10A
YEL/BLK
YEL/BLK
YEL/BLK
YEL/BLK
YEL/BLK
YEL/BLK
YEL/BLK
YEL/BLK
YEL/RED
WHT/RED
CHECK RELAY
WHT/BLK
GRN
BLK
CARBURATOR HEATER
ALTERNATOR WITH REGULATOR
IGNITION COIL
BLK/WHT
BLU
HEAT WARNING LIGHT
GRN/BLU
NO.2 THREE WAY SOLENOID VALVE
GRN
AIR VENT SOLENOID VALVE
BLK
SLOW FUEL CUT SOLENOID VALVE
NO.1 THREE WAY SOLENOID VALVE
BRN/RED
VACUUM SWITCH
BLK
FUSE 10A
GRY/YEL
KICK DOWN SWITCH
BLK/WHT
KICK DOWN SOLENOID
IGNITER (IN DISTRIBUTOR)
SPARKPLUGS
GRN/BLU
HEAT HAZARD SENSOR
VEHICLE SPEED SWITCH
BRN/WHT
NEUTRAL SWITCH
ACCEL. SWITCH
CLUTCH SWITCH
BRN/WHT
ENGINE SPEED UNIT
YEL/GRN
HOT IN START AND RUN
FUSE 10
GRN/YEL
COMBINATION METER
VOLTAGE REGULATOR
WATER TEMPERATURE GAUGE
FUEL GAUGE
BRAKE WARNING LIGHT
OIL PRESSURE WARNING LIGHT
GENERATOR WARNING LIGHT
BLK
YEL/WHT
YEL
RED/BLK
YEL/BLU
YEL/RED
BRAKE WARNING LIGHT CHECKER
WATER TEMP. GAUGE UNIT
FUEL GAUGE TANK UNIT
PARKING BRAKE SWITCH
BRAKE FLUID LEVEL SENSOR
OIL PRESSURE SWITCH