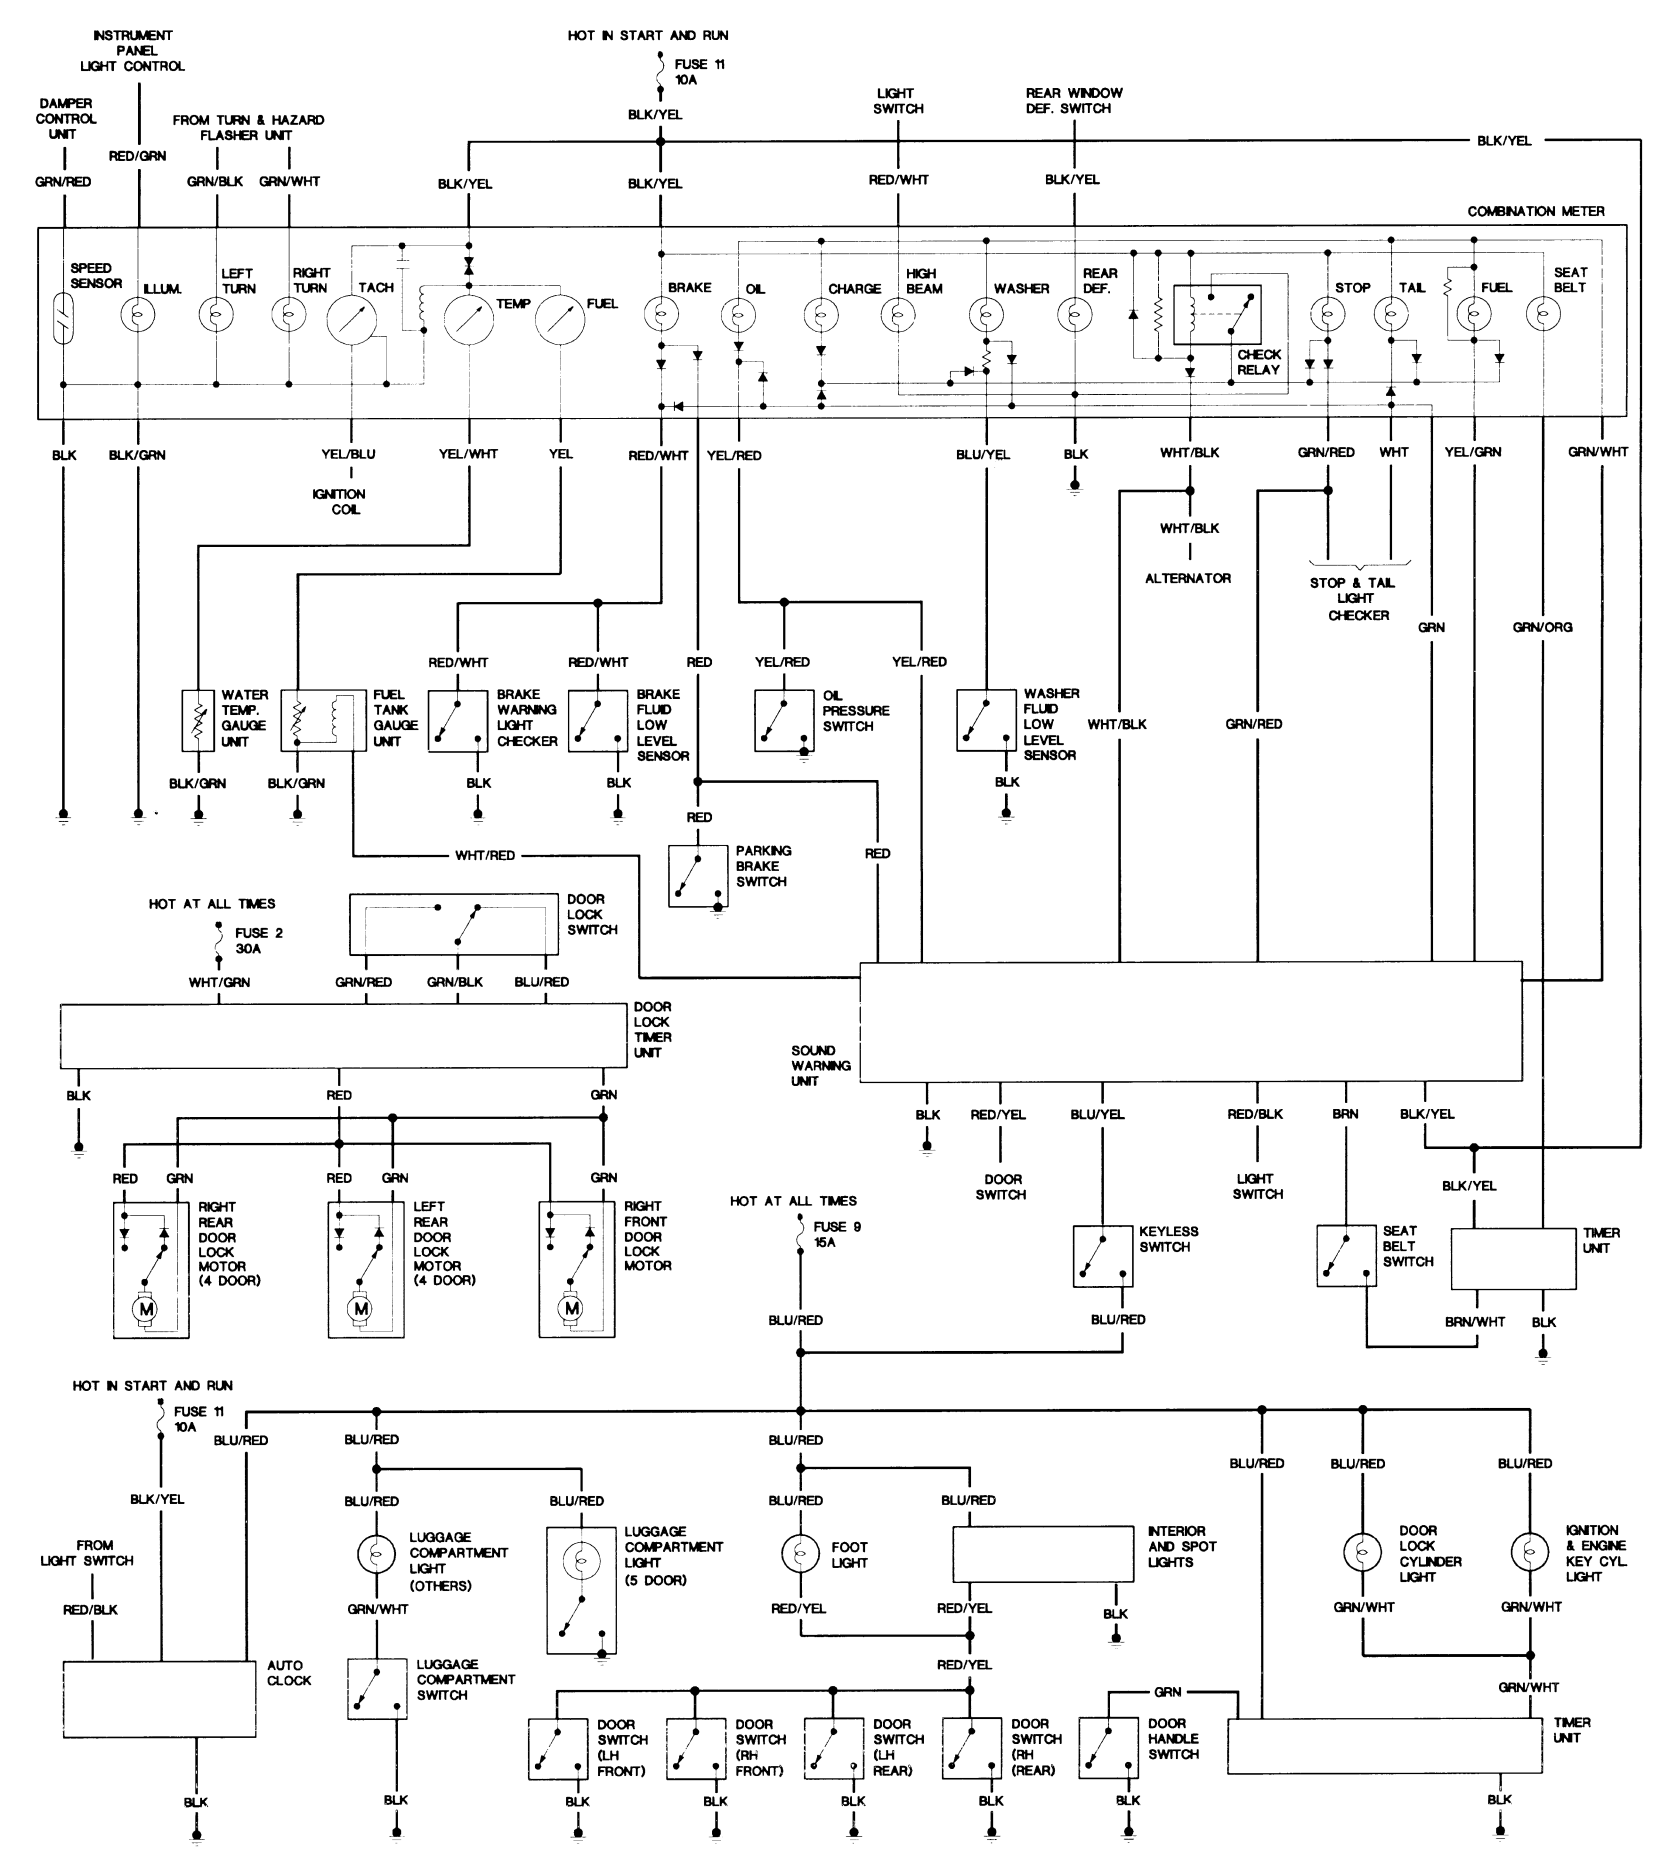
INSTRUMENT PANEL LIGHT CONTROL
DAMPER CONTROL UNIT
FROM TURN & HAZARD FLASHER UNIT
HOT IN START AND RUN
FUSE 11 10A
LIGHT SWITCH
REAR WINDOW DEF. SWITCH
COMBINATION METER
SPEED SENSOR
ILLUM.
LEFT TURN
RIGHT TURN
TACH
TEMP
FUEL
BRAKE
OIL
CHARGE
HIGH BEAM
WASHER
REAR DEF.
CHECK RELAY
STOP
TAIL
FUEL
SEAT BELT
IGNITION COIL
ALTERNATOR
STOP & TAIL LIGHT CHECKER
WATER TEMP. GAUGE UNIT
FUEL TANK GAUGE UNIT
BRAKE WARNING LIGHT CHECKER
BRAKE FLUID LOW LEVEL SENSOR
OIL PRESSURE SWITCH
WASHER FLUID LOW LEVEL SENSOR
PARKING BRAKE SWITCH
HOT AT ALL TIMES
FUSE 2 30A
DOOR LOCK SWITCH
DOOR LOCK TIMER UNIT
SOUND WARNING UNIT
DOOR SWITCH
LIGHT SWITCH
KEYLESS SWITCH
SEAT BELT SWITCH
TIMER UNIT
RIGHT REAR DOOR LOCK MOTOR (4 DOOR)
LEFT REAR DOOR LOCK MOTOR (4 DOOR)
RIGHT FRONT DOOR LOCK MOTOR
HOT AT ALL TIMES
FUSE 9 15A
HOT IN START AND RUN
FUSE 11 10A
FROM LIGHT SWITCH
AUTO CLOCK
LUGGAGE COMPARTMENT LIGHT (OTHERS)
LUGGAGE COMPARTMENT SWITCH
LUGGAGE COMPARTMENT LIGHT (5 DOOR)
FOOT LIGHT
INTERIOR AND SPOT LIGHTS
DOOR LOCK CYLINDER LIGHT
IGNITION & ENGINE KEY CYL. LIGHT
DOOR SWITCH (LH FRONT)
DOOR SWITCH (RH FRONT)
DOOR SWITCH (LH REAR)
DOOR SWITCH (RH REAR)
DOOR HANDLE SWITCH
TIMER UNIT