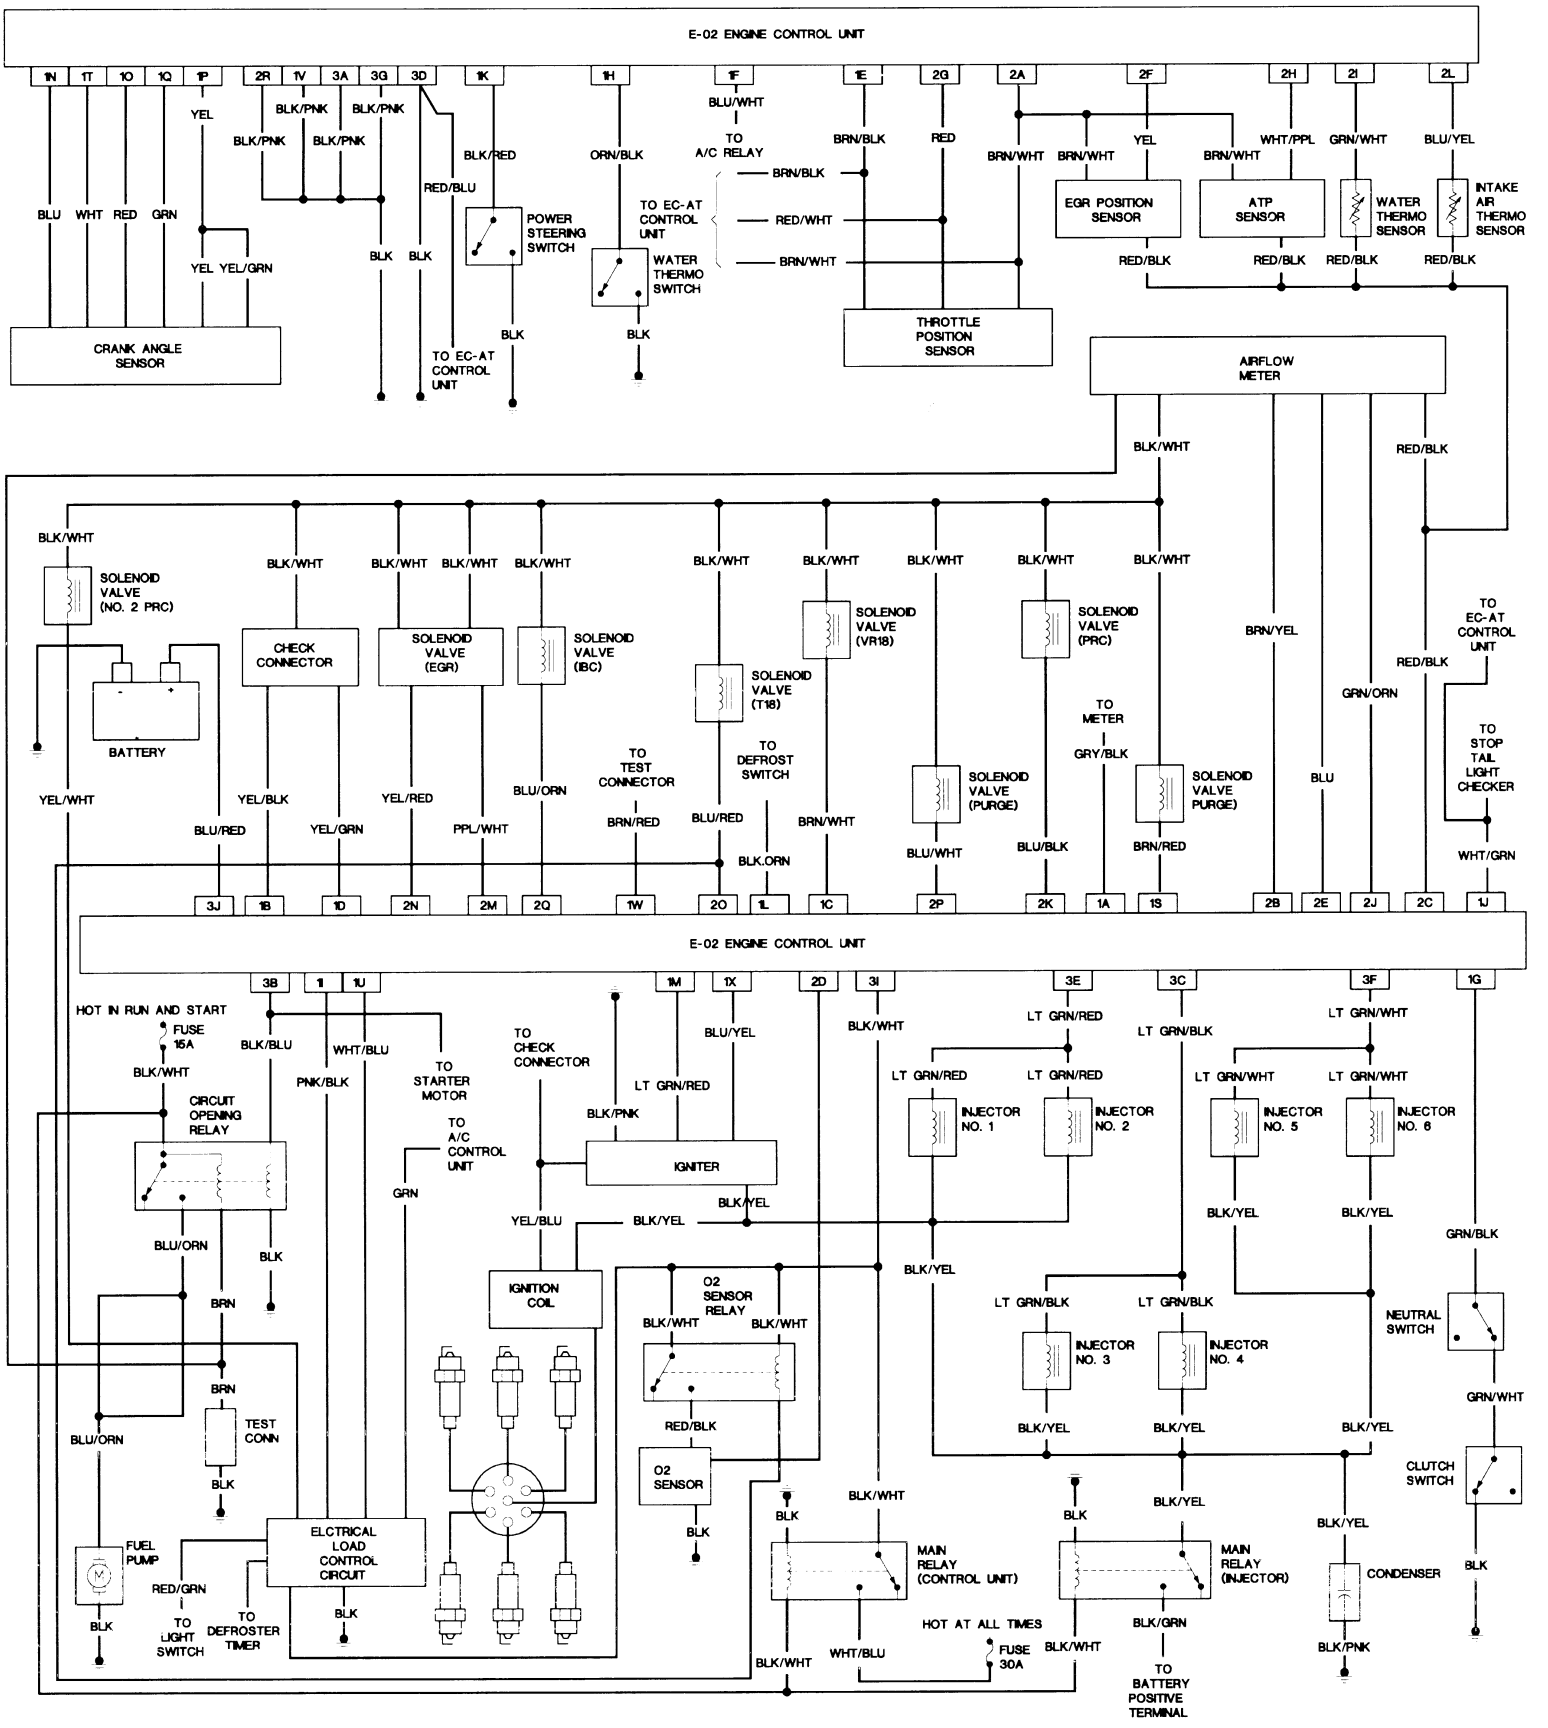
E-02 ENGINE CONTROL UNIT
1N
1T
1O
1Q
1P
2R
1V
3A
3G
3D
1K
1H
1F
1E
2G
2A
2F
2H
2I
2L
BLU
WHT
RED
GRN
YEL
YEL YEL/GRN
CRANK ANGLE SENSOR
BLK/PNK
BLK/RED
RED/BLU
BLK
TO EC-AT CONTROL UNIT
POWER STEERING SWITCH
ORN/BLK
WATER THERMO SWITCH
BLU/WHT
TO A/C RELAY
TO EC-AT CONTROL UNIT
BRN/BLK
RED/WHT
BRN/WHT
THROTTLE POSITION SENSOR
RED
BRN/WHT
YEL
EGR POSITION SENSOR
WHT/PPL
ATP SENSOR
GRN/WHT
WATER THERMO SENSOR
BLU/YEL
INTAKE AIR THERMO SENSOR
RED/BLK
AIRFLOW METER
BLK/WHT
SOLENOID VALVE (NO. 2 PRC)
BATTERY
CHECK CONNECTOR
SOLENOID VALVE (EGR)
SOLENOID VALVE (IBC)
SOLENOID VALVE (T18)
SOLENOID VALVE (VR18)
SOLENOID VALVE (PRC)
SOLENOID VALVE (PURGE)
SOLENOID VALVE PURGE)
BRN/YEL
GRN/ORN
BLU
TO METER
GRY/BLK
TO EC-AT CONTROL UNIT
TO STOP TAIL LIGHT CHECKER
WHT/GRN
YEL/WHT
BLU/RED
YEL/BLK
YEL/GRN
YEL/RED
PPL/WHT
BLU/ORN
TO TEST CONNECTOR
BRN/RED
TO DEFROST SWITCH
BLK.ORN
BLU/WHT
BLU/BLK
3J
1B
1D
2N
2M
2Q
1W
2O
1L
1C
2P
2K
1A
1S
2B
2E
2J
2C
1J
E-02 ENGINE CONTROL UNIT
3B
1I
1U
1M
1X
2D
3I
3E
3C
3F
1G
HOT IN RUN AND START
FUSE 15A
BLK/BLU
WHT/BLU
PNK/BLK
TO STARTER MOTOR
TO A/C CONTROL UNIT
GRN
TO CHECK CONNECTOR
BLK/PNK
LT GRN/RED
BLU/YEL
IGNITER
BLK/YEL
YEL/BLU
IGNITION COIL
CIRCUIT OPENING RELAY
BLU/ORN
BLK
BRN
TEST CONN
FUEL PUMP
RED/GRN
TO LIGHT SWITCH
TO DEFROSTER TIMER
ELCTRICAL LOAD CONTROL CIRCUIT
O2 SENSOR RELAY
O2 SENSOR
RED/BLK
LT GRN/RED
INJECTOR NO. 1
INJECTOR NO. 2
LT GRN/BLK
INJECTOR NO. 3
INJECTOR NO. 4
LT GRN/WHT
INJECTOR NO. 5
INJECTOR NO. 6
NEUTRAL SWITCH
GRN/WHT
CLUTCH SWITCH
CONDENSER
BLK/PNK
MAIN RELAY (CONTROL UNIT)
MAIN RELAY (INJECTOR)
HOT AT ALL TIMES
FUSE 30A
BLK/GRN
TO BATTERY POSITIVE TERMINAL