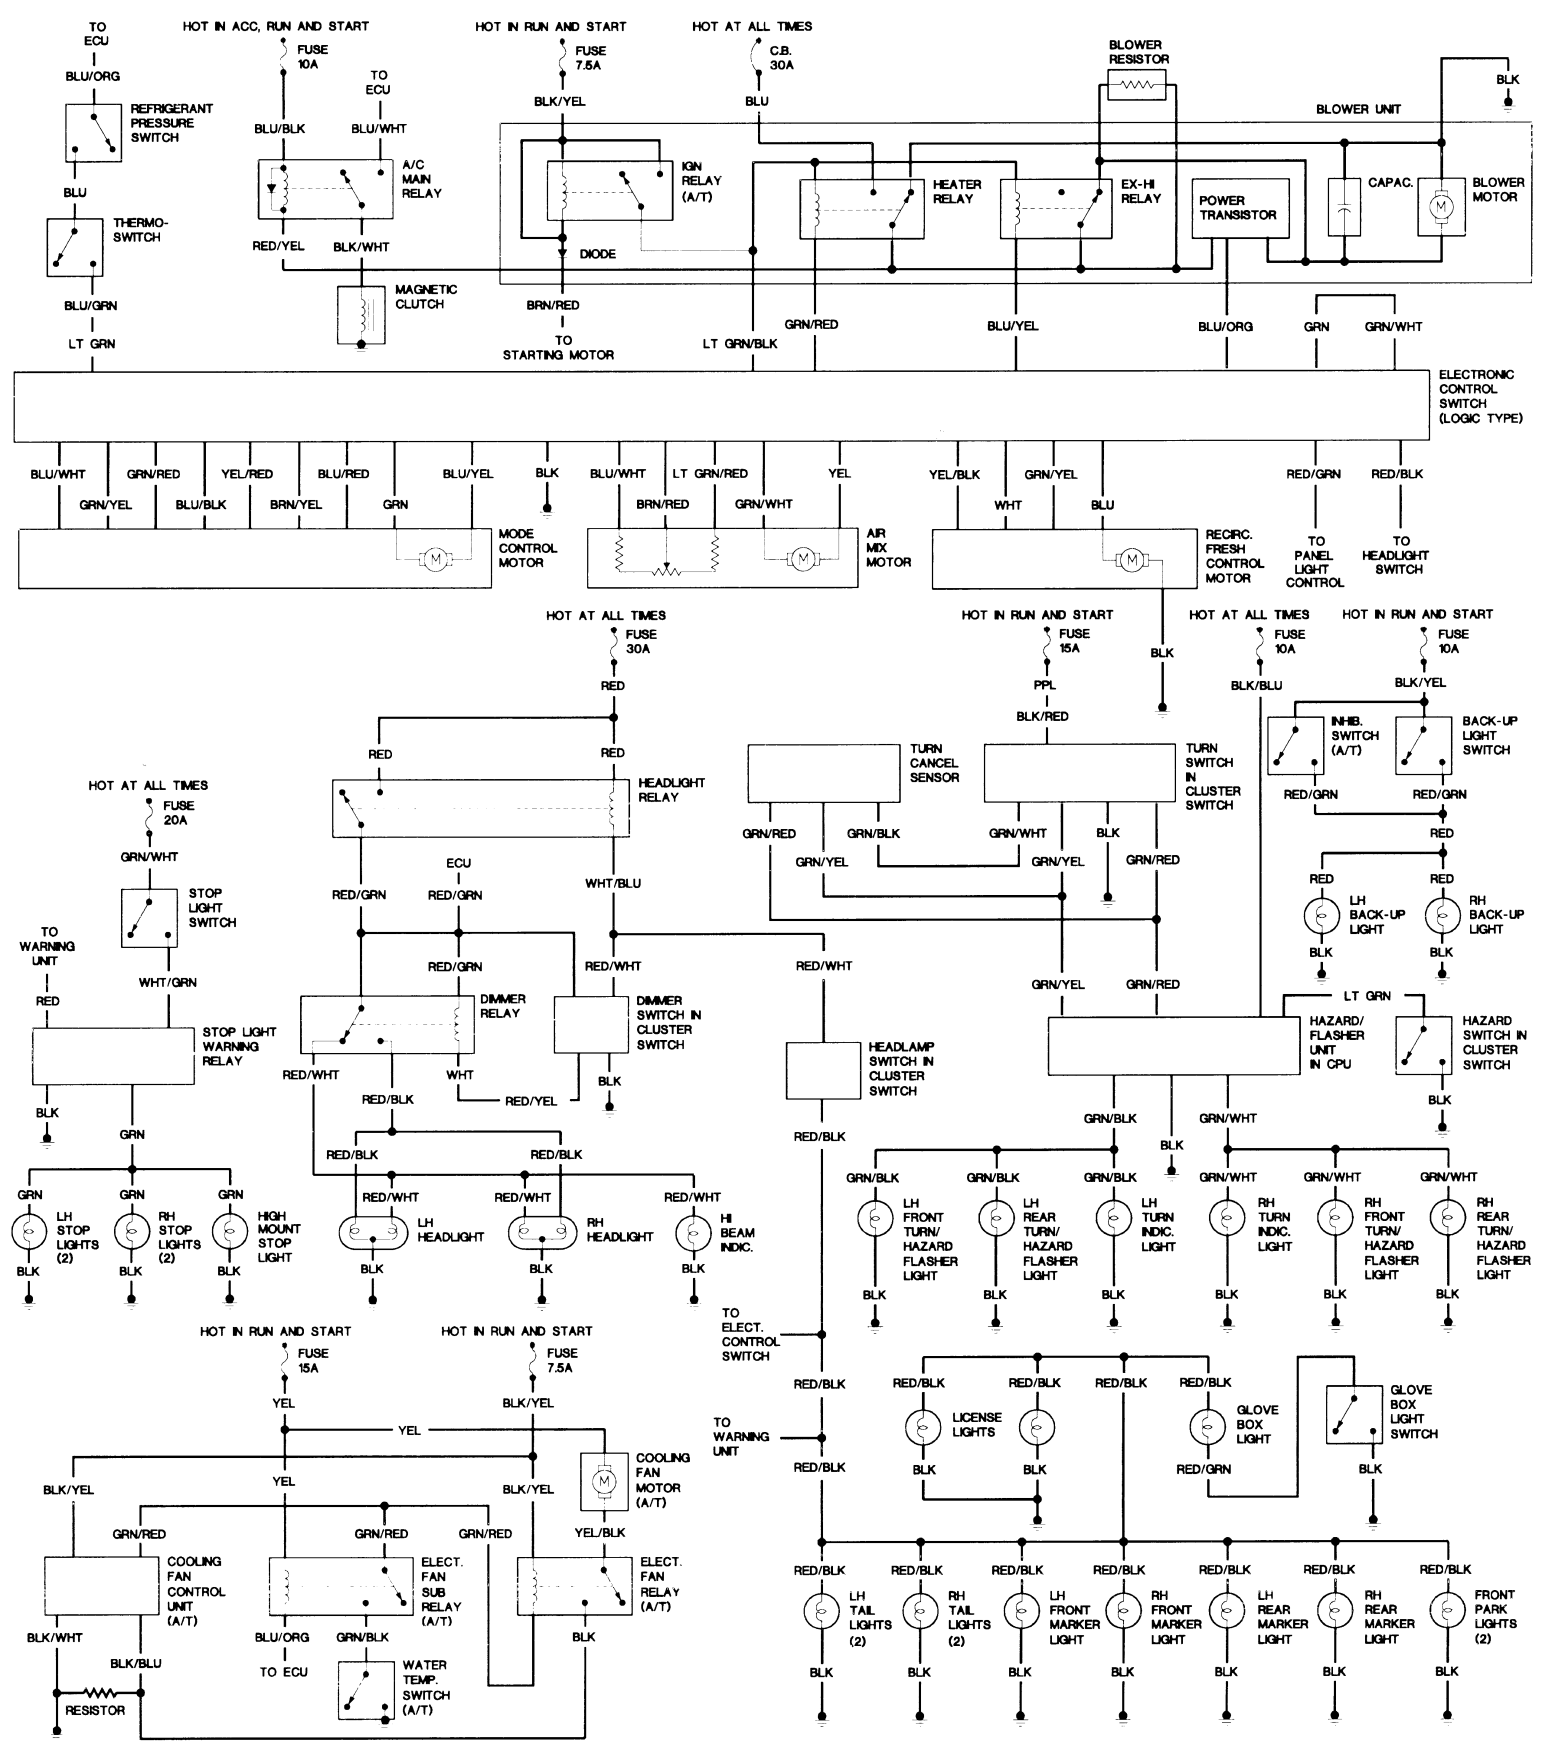
TO ECU
BLU/ORG
REFRIGERANT PRESSURE SWITCH
BLU
THERMO-SWITCH
BLU/GRN
LT GRN
HOT IN ACC, RUN AND START
FUSE 10A
TO ECU
BLU/BLK
BLU/WHT
A/C MAIN RELAY
RED/YEL
BLK/WHT
MAGNETIC CLUTCH
HOT IN RUN AND START
FUSE 7.5A
BLK/YEL
IGN RELAY (A/T)
DIODE
BRN/RED
TO STARTING MOTOR
HOT AT ALL TIMES
C.B. 30A
BLU
LT GRN/BLK
BLOWER RESISTOR
BLK
BLOWER UNIT
HEATER RELAY
EX-HI RELAY
POWER TRANSISTOR
CAPAC.
BLOWER MOTOR
GRN/RED
BLU/YEL
BLU/ORG
GRN
GRN/WHT
ELECTRONIC CONTROL SWITCH (LOGIC TYPE)
BLU/WHT
GRN/YEL
GRN/RED
BLU/BLK
YEL/RED
BRN/YEL
BLU/RED
GRN
BLU/YEL
BLK
MODE CONTROL MOTOR
BLU/WHT
BRN/RED
LT GRN/RED
GRN/WHT
YEL
AIR MIX MOTOR
YEL/BLK
WHT
GRN/YEL
BLU
RECIRC. FRESH CONTROL MOTOR
RED/GRN
TO PANEL LIGHT CONTROL
RED/BLK
TO HEADLIGHT SWITCH
HOT AT ALL TIMES
FUSE 30A
RED
HEADLIGHT RELAY
RED
RED
ECU
RED/GRN
RED/GRN
WHT/BLU
HOT AT ALL TIMES
FUSE 20A
GRN/WHT
STOP LIGHT SWITCH
TO WARNING UNIT
WHT/GRN
RED
STOP LIGHT WARNING RELAY
BLK
GRN
GRN
GRN
GRN
LH STOP LIGHTS (2)
RH STOP LIGHTS (2)
HIGH MOUNT STOP LIGHT
BLK
BLK
BLK
RED/GRN
DIMMER RELAY
RED/WHT
DIMMER SWITCH IN CLUSTER SWITCH
RED/WHT
WHT
BLK
RED/YEL
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/WHT
RED/WHT
RED/WHT
RED/WHT
LH HEADLIGHT
RH HEADLIGHT
HI BEAM INDIC.
BLK
BLK
BLK
HOT IN RUN AND START
FUSE 15A
YEL
YEL
YEL
BLK/YEL
GRN/RED
GRN/RED
GRN/RED
BLK/WHT
BLK/BLU
RESISTOR
COOLING FAN CONTROL UNIT (A/T)
ELECT. FAN SUB RELAY (A/T)
BLU/ORG
TO ECU
GRN/BLK
WATER TEMP. SWITCH (A/T)
HOT IN RUN AND START
FUSE 7.5A
BLK/YEL
BLK/YEL
COOLING FAN MOTOR (A/T)
YEL/BLK
ELECT. FAN RELAY (A/T)
BLK
HOT IN RUN AND START
FUSE 15A
PPL
BLK/RED
BLK
TURN CANCEL SENSOR
TURN SWITCH IN CLUSTER SWITCH
GRN/RED
GRN/BLK
GRN/YEL
GRN/WHT
BLK
GRN/YEL
GRN/RED
GRN/YEL
GRN/RED
HOT AT ALL TIMES
FUSE 10A
BLK/BLU
HOT IN RUN AND START
FUSE 10A
BLK/YEL
INHIB. SWITCH (A/T)
BACK-UP LIGHT SWITCH
RED/GRN
RED/GRN
RED
RED
RED
LH BACK-UP LIGHT
RH BACK-UP LIGHT
BLK
BLK
LT GRN
HAZARD/ FLASHER UNIT IN CPU
HAZARD SWITCH IN CLUSTER SWITCH
BLK
HEADLAMP SWITCH IN CLUSTER SWITCH
RED/BLK
GRN/BLK
BLK
GRN/WHT
GRN/BLK
GRN/BLK
GRN/BLK
GRN/WHT
GRN/WHT
GRN/WHT
LH FRONT TURN/ HAZARD FLASHER LIGHT
LH REAR TURN/ HAZARD FLASHER LIGHT
LH TURN INDIC. LIGHT
RH TURN INDIC. LIGHT
RH FRONT TURN/ HAZARD FLASHER LIGHT
RH REAR TURN/ HAZARD FLASHER LIGHT
BLK
BLK
BLK
BLK
BLK
BLK
TO ELECT. CONTROL SWITCH
TO WARNING UNIT
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
LICENSE LIGHTS
GLOVE BOX LIGHT
RED/GRN
GLOVE BOX LIGHT SWITCH
BLK
BLK
BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
RED/BLK
LH TAIL LIGHTS (2)
RH TAIL LIGHTS (2)
LH FRONT MARKER LIGHT
RH FRONT MARKER LIGHT
LH REAR MARKER LIGHT
RH REAR MARKER LIGHT
FRONT PARK LIGHTS (2)
BLK
BLK
BLK
BLK
BLK
BLK
BLK