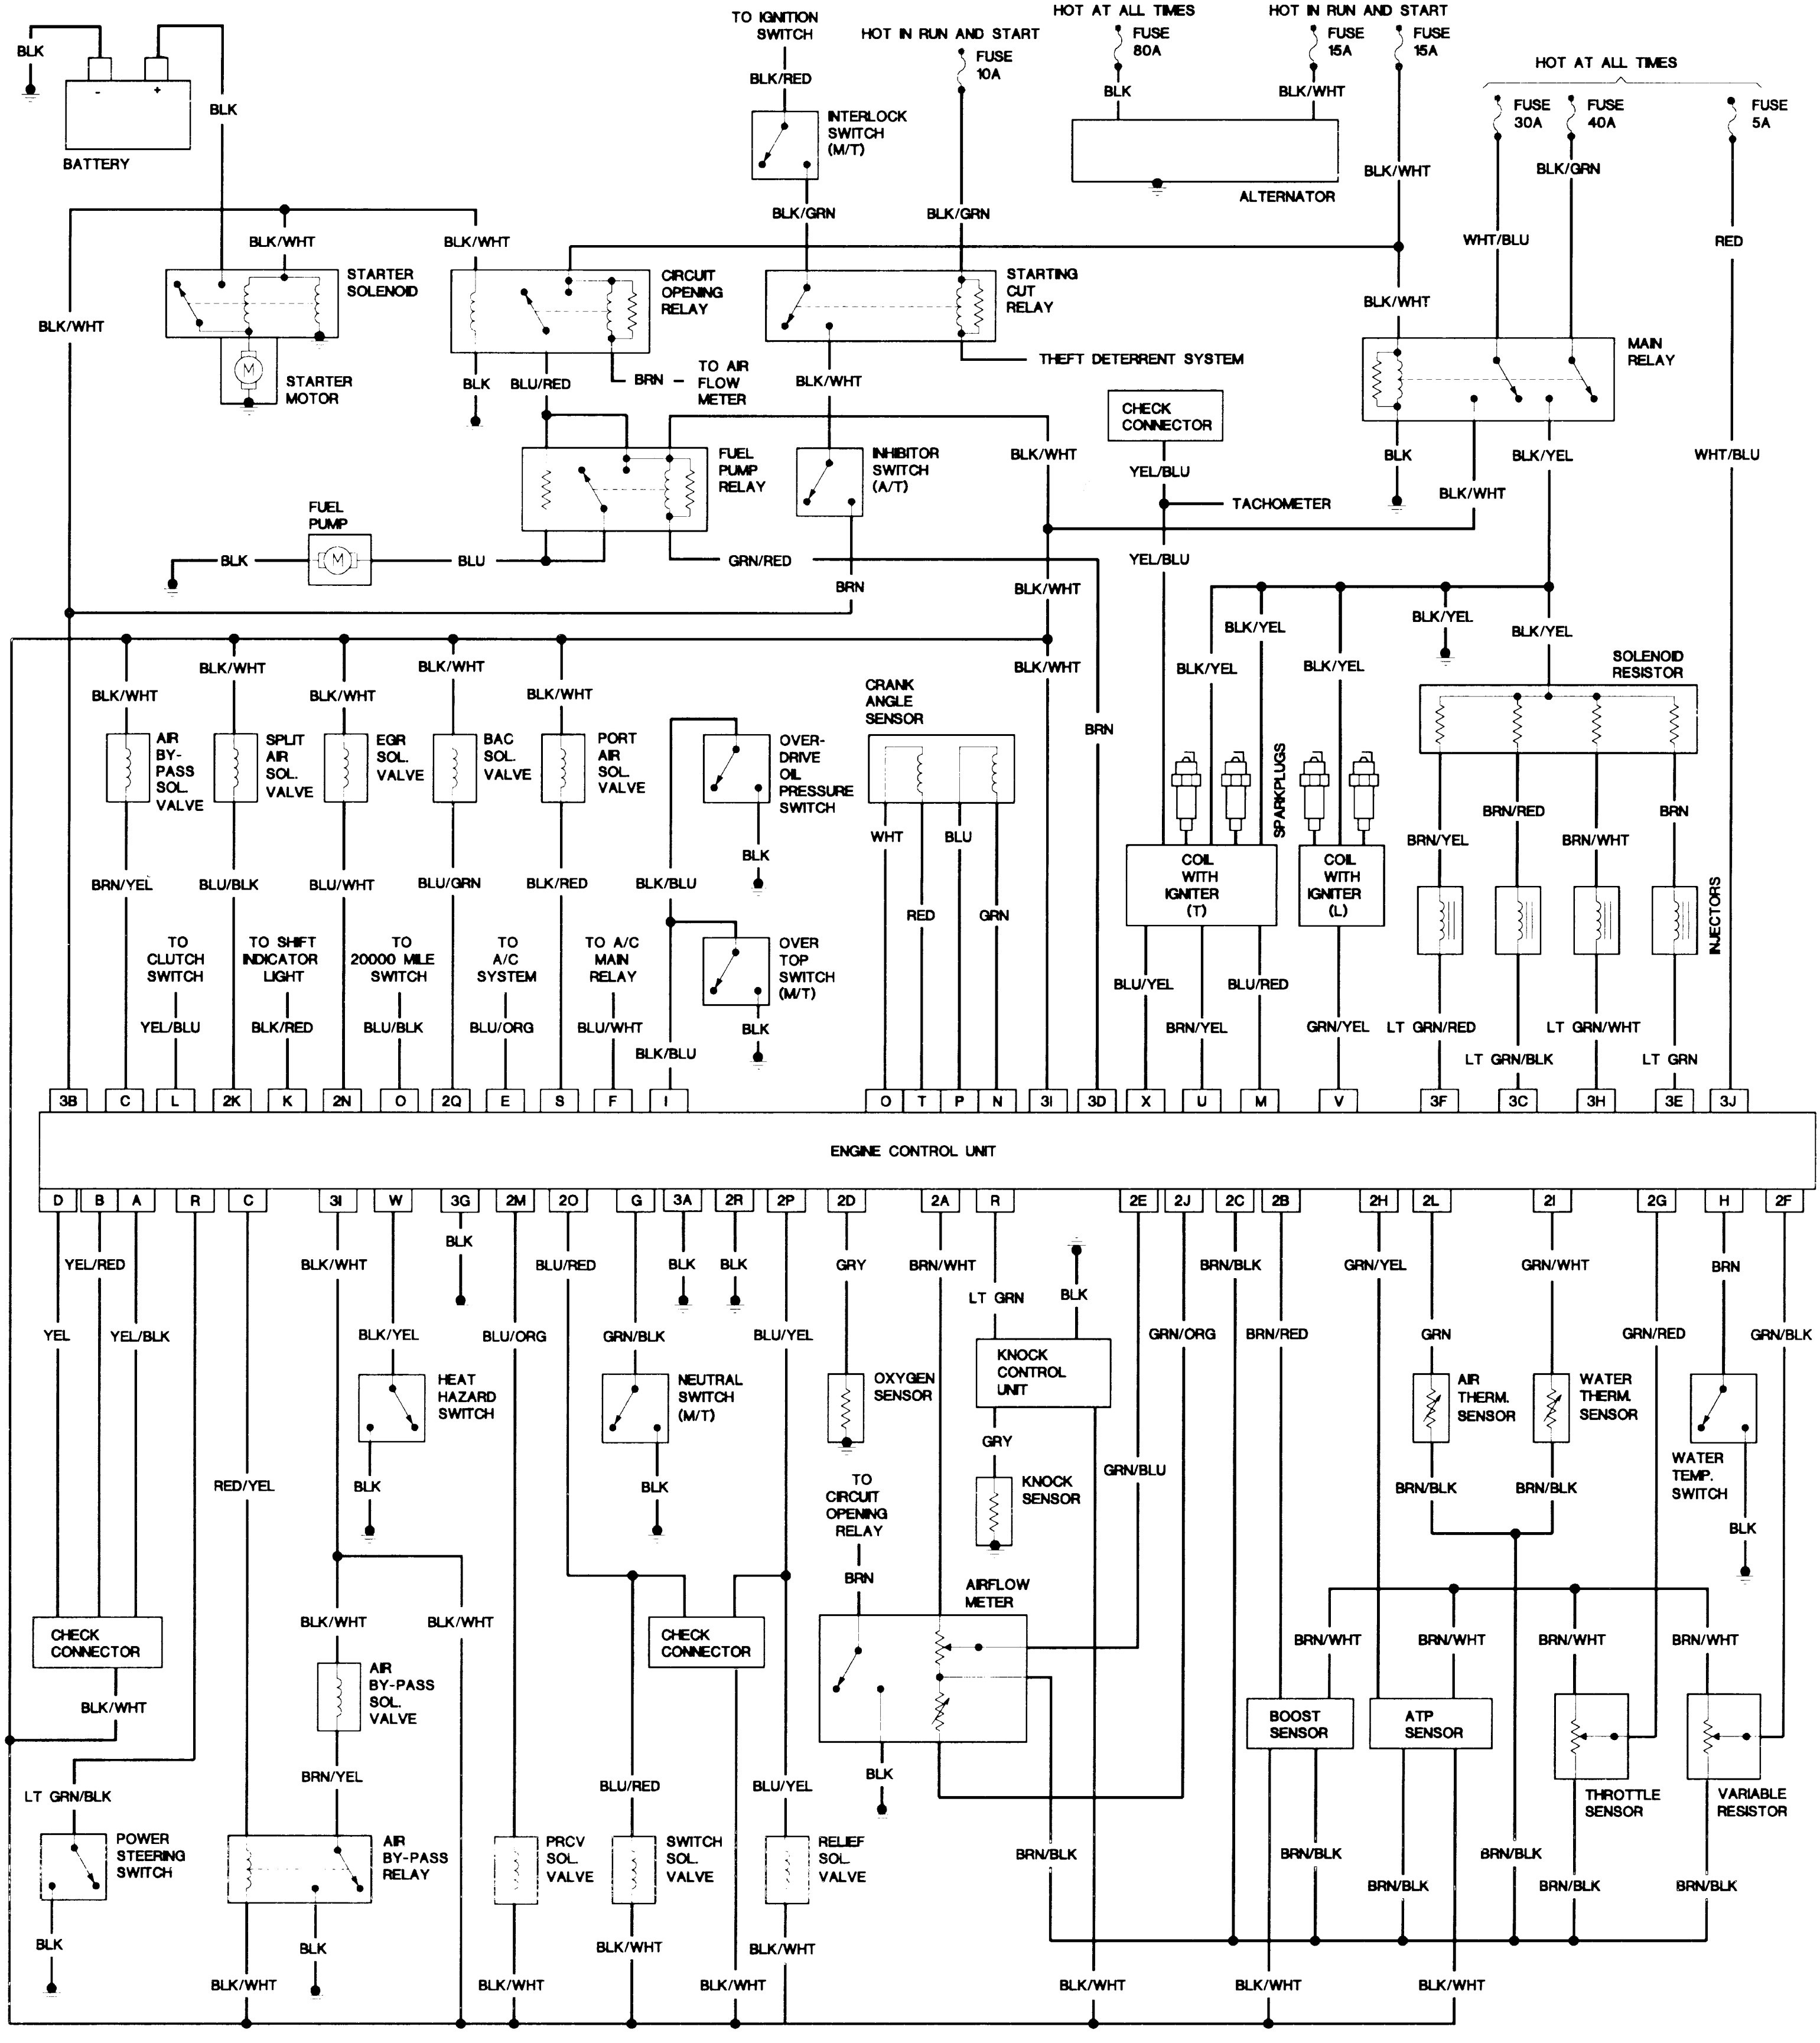

BATTERY
STARTER SOLENOID
STARTER MOTOR
TO IGNITION SWITCH
INTERLOCK SWITCH (M/T)
HOT IN RUN AND START
FUSE 10A
HOT AT ALL TIMES
FUSE 80A
HOT IN RUN AND START
FUSE 15A
FUSE 15A
ALTERNATOR
HOT AT ALL TIMES
FUSE 30A
FUSE 40A
FUSE 5A
CIRCUIT OPENING RELAY
STARTING CUT RELAY
THEFT DETERRENT SYSTEM
MAIN RELAY
TO AIR FLOW METER
FUEL PUMP RELAY
INHIBITOR SWITCH (A/T)
CHECK CONNECTOR
TACHOMETER
FUEL PUMP
AIR BY-PASS SOL. VALVE
SPLIT AIR SOL. VALVE
EGR SOL. VALVE
BAC SOL. VALVE
PORT AIR SOL. VALVE
OVER-DRIVE OIL PRESSURE SWITCH
CRANK ANGLE SENSOR
SPARKPLUGS
SOLENOID RESISTOR
COIL WITH IGNITER (T)
COIL WITH IGNITER (L)
INJECTORS
TO CLUTCH SWITCH
TO SHIFT INDICATOR LIGHT
TO 20000 MILE SWITCH
TO A/C SYSTEM
TO A/C MAIN RELAY
OVER TOP SWITCH (M/T)
ENGINE CONTROL UNIT
HEAT HAZARD SWITCH
NEUTRAL SWITCH (M/T)
OXYGEN SENSOR
KNOCK CONTROL UNIT
KNOCK SENSOR
AIR THERM. SENSOR
WATER THERM. SENSOR
WATER TEMP. SWITCH
TO CIRCUIT OPENING RELAY
AIRFLOW METER
CHECK CONNECTOR
CHECK CONNECTOR
AIR BY-PASS SOL. VALVE
BOOST SENSOR
ATP SENSOR
THROTTLE SENSOR
VARIABLE RESISTOR
POWER STEERING SWITCH
AIR BY-PASS RELAY
PRCV SOL. VALVE
SWITCH SOL. VALVE
RELIEF SOL. VALVE