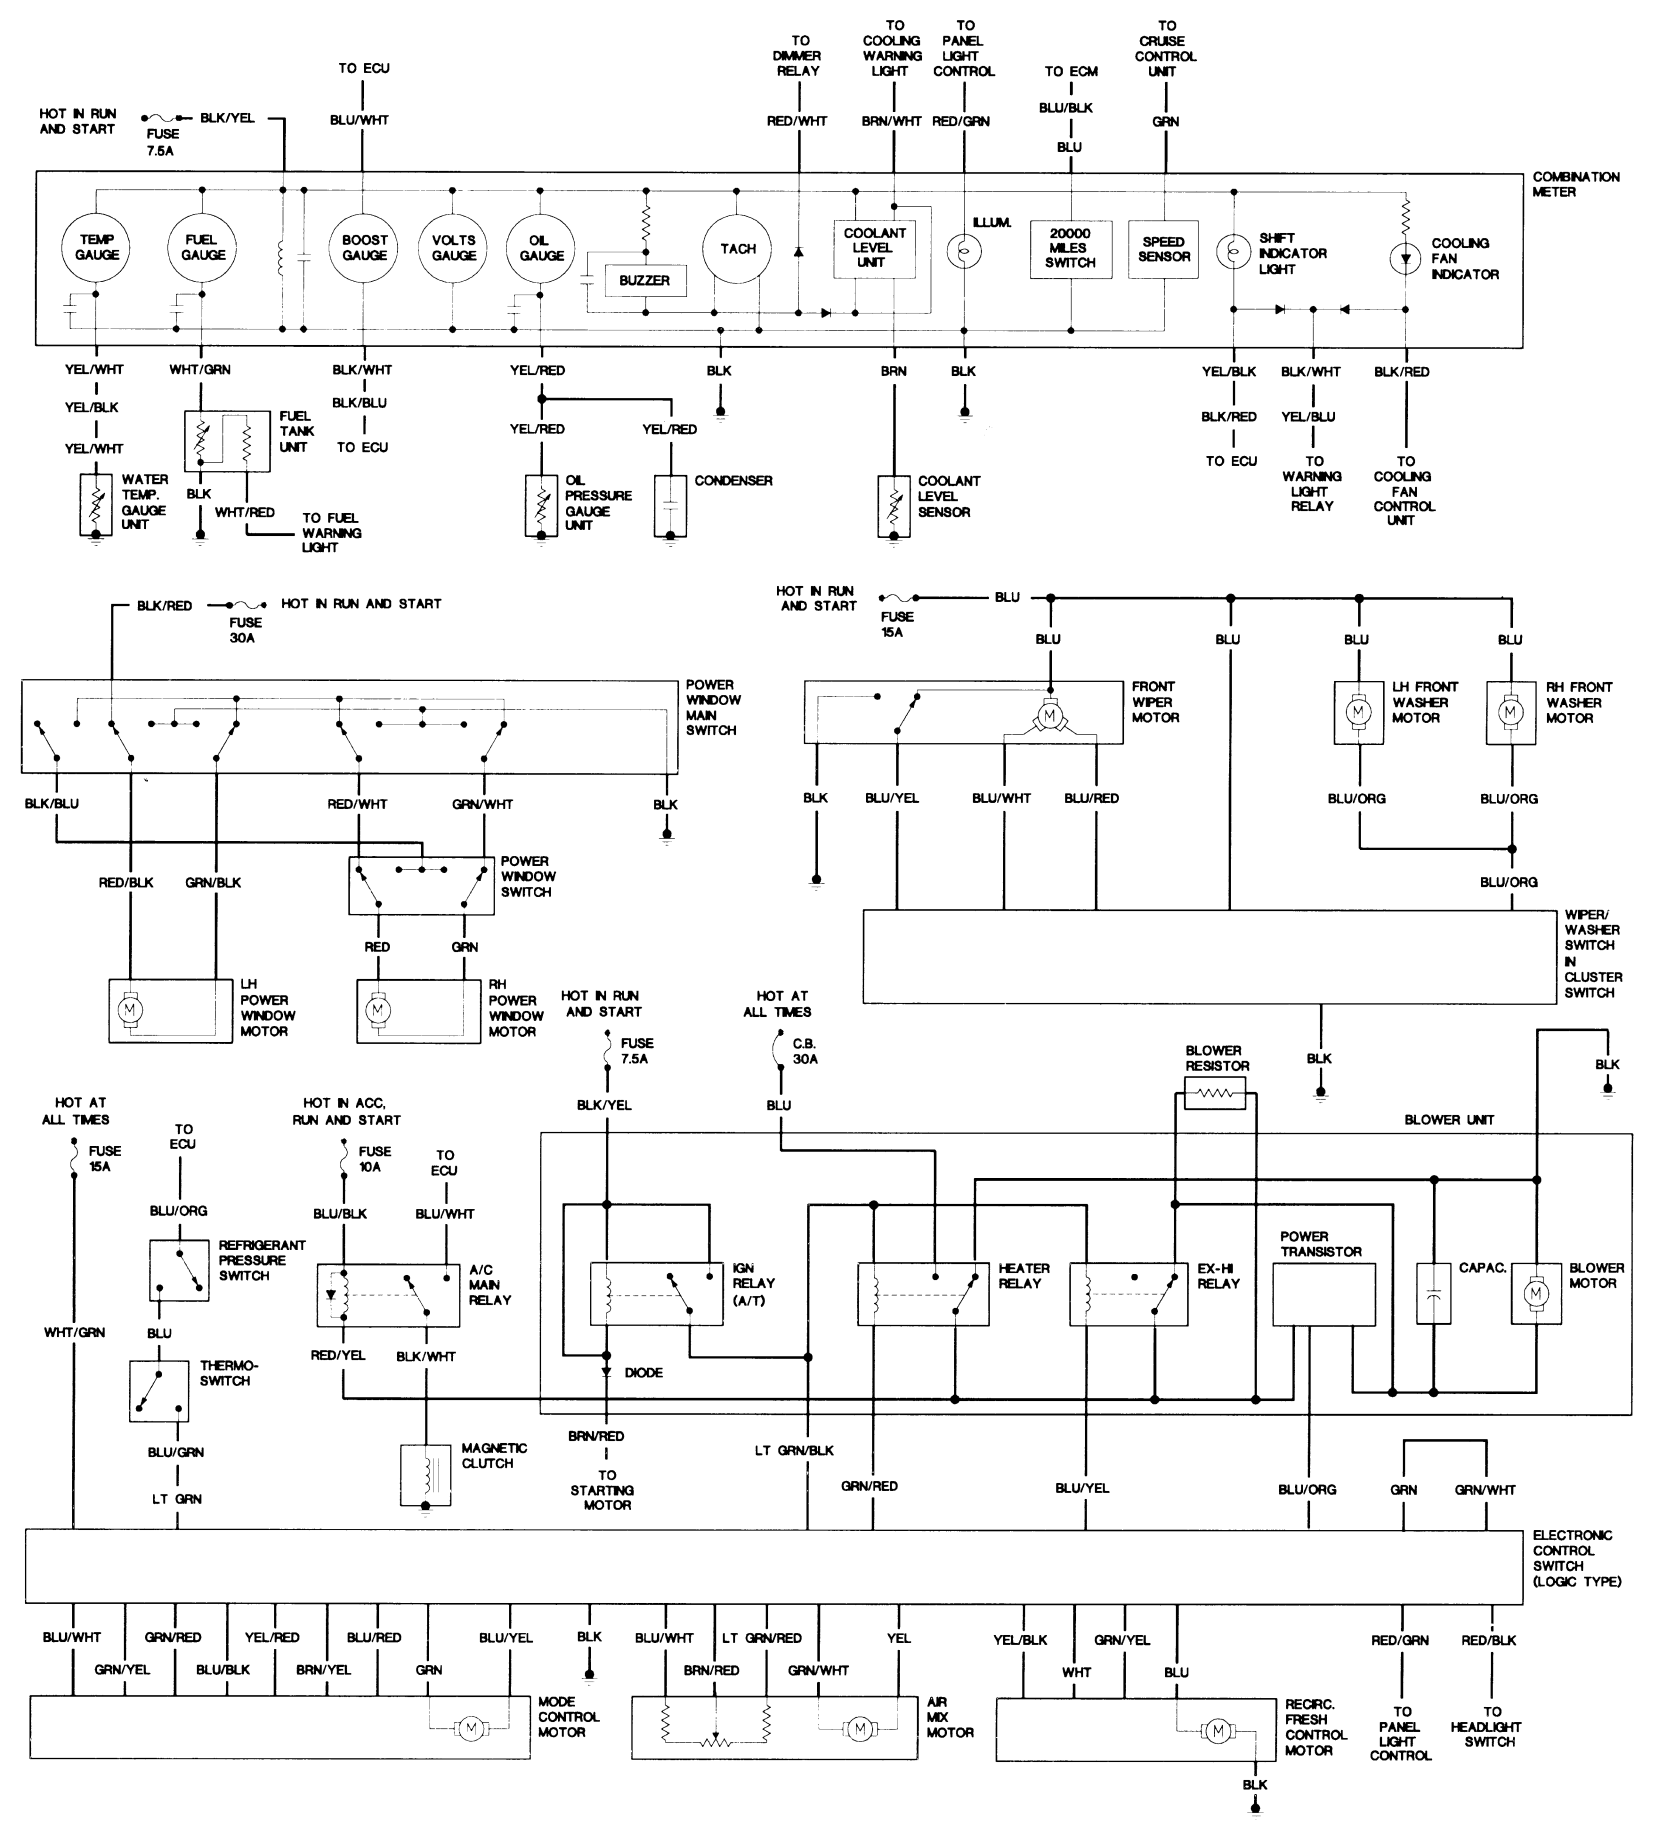
HOT IN RUN AND START
FUSE 7.5A
BLK/YEL
TO ECU
BLU/WHT
TO DIMMER RELAY
RED/WHT
TO COOLING WARNING LIGHT
BRN/WHT
TO PANEL LIGHT CONTROL
RED/GRN
TO ECM
BLU/BLK
BLU
TO CRUISE CONTROL UNIT
GRN
COMBINATION METER
TEMP GAUGE
FUEL GAUGE
BOOST GAUGE
VOLTS GAUGE
OIL GAUGE
BUZZER
TACH
COOLANT LEVEL UNIT
ILLUM.
20000 MILES SWITCH
SPEED SENSOR
SHIFT INDICATOR LIGHT
COOLING FAN INDICATOR
YEL/WHT
YEL/BLK
YEL/WHT
WATER TEMP. GAUGE UNIT
WHT/GRN
FUEL TANK UNIT
BLK
WHT/RED
TO FUEL WARNING LIGHT
BLK/WHT
BLK/BLU
TO ECU
YEL/RED
YEL/RED
OIL PRESSURE GAUGE UNIT
YEL/RED
CONDENSER
BLK
BRN
COOLANT LEVEL SENSOR
BLK
YEL/BLK
BLK/RED
TO ECU
BLK/WHT
YEL/BLU
TO WARNING LIGHT RELAY
BLK/RED
TO COOLING FAN CONTROL UNIT
BLK/RED
FUSE 30A
HOT IN RUN AND START
POWER WINDOW MAIN SWITCH
BLK/BLU
RED/WHT
GRN/WHT
BLK
RED/BLK
GRN/BLK
POWER WINDOW SWITCH
RED
GRN
LH POWER WINDOW MOTOR
RH POWER WINDOW MOTOR
HOT IN RUN AND START
FUSE 15A
BLU
BLU
BLU
BLU
BLU
FRONT WIPER MOTOR
LH FRONT WASHER MOTOR
RH FRONT WASHER MOTOR
BLK
BLU/YEL
BLU/WHT
BLU/RED
BLU/ORG
BLU/ORG
BLU/ORG
WIPER/ WASHER SWITCH IN CLUSTER SWITCH
BLK
BLK
HOT AT ALL TIMES
FUSE 15A
WHT/GRN
TO ECU
BLU/ORG
REFRIGERANT PRESSURE SWITCH
BLU
THERMO-SWITCH
BLU/GRN
LT GRN
HOT IN ACC, RUN AND START
FUSE 10A
BLU/BLK
TO ECU
BLU/WHT
A/C MAIN RELAY
RED/YEL
BLK/WHT
MAGNETIC CLUTCH
HOT IN RUN AND START
FUSE 7.5A
BLK/YEL
HOT AT ALL TIMES
C.B. 30A
BLU
BLOWER RESISTOR
BLOWER UNIT
IGN RELAY (A/T)
DIODE
HEATER RELAY
EX-HI RELAY
POWER TRANSISTOR
CAPAC.
BLOWER MOTOR
BRN/RED
TO STARTING MOTOR
LT GRN/BLK
GRN/RED
BLU/YEL
BLU/ORG
GRN
GRN/WHT
ELECTRONIC CONTROL SWITCH (LOGIC TYPE)
BLU/WHT
GRN/YEL
GRN/RED
BLU/BLK
YEL/RED
BRN/YEL
BLU/RED
GRN
BLU/YEL
BLK
MODE CONTROL MOTOR
BLU/WHT
BRN/RED
LT GRN/RED
GRN/WHT
YEL
AIR MIX MOTOR
YEL/BLK
WHT
GRN/YEL
BLU
RECIRC. FRESH CONTROL MOTOR
BLK
RED/GRN
TO PANEL LIGHT CONTROL
RED/BLK
TO HEADLIGHT SWITCH