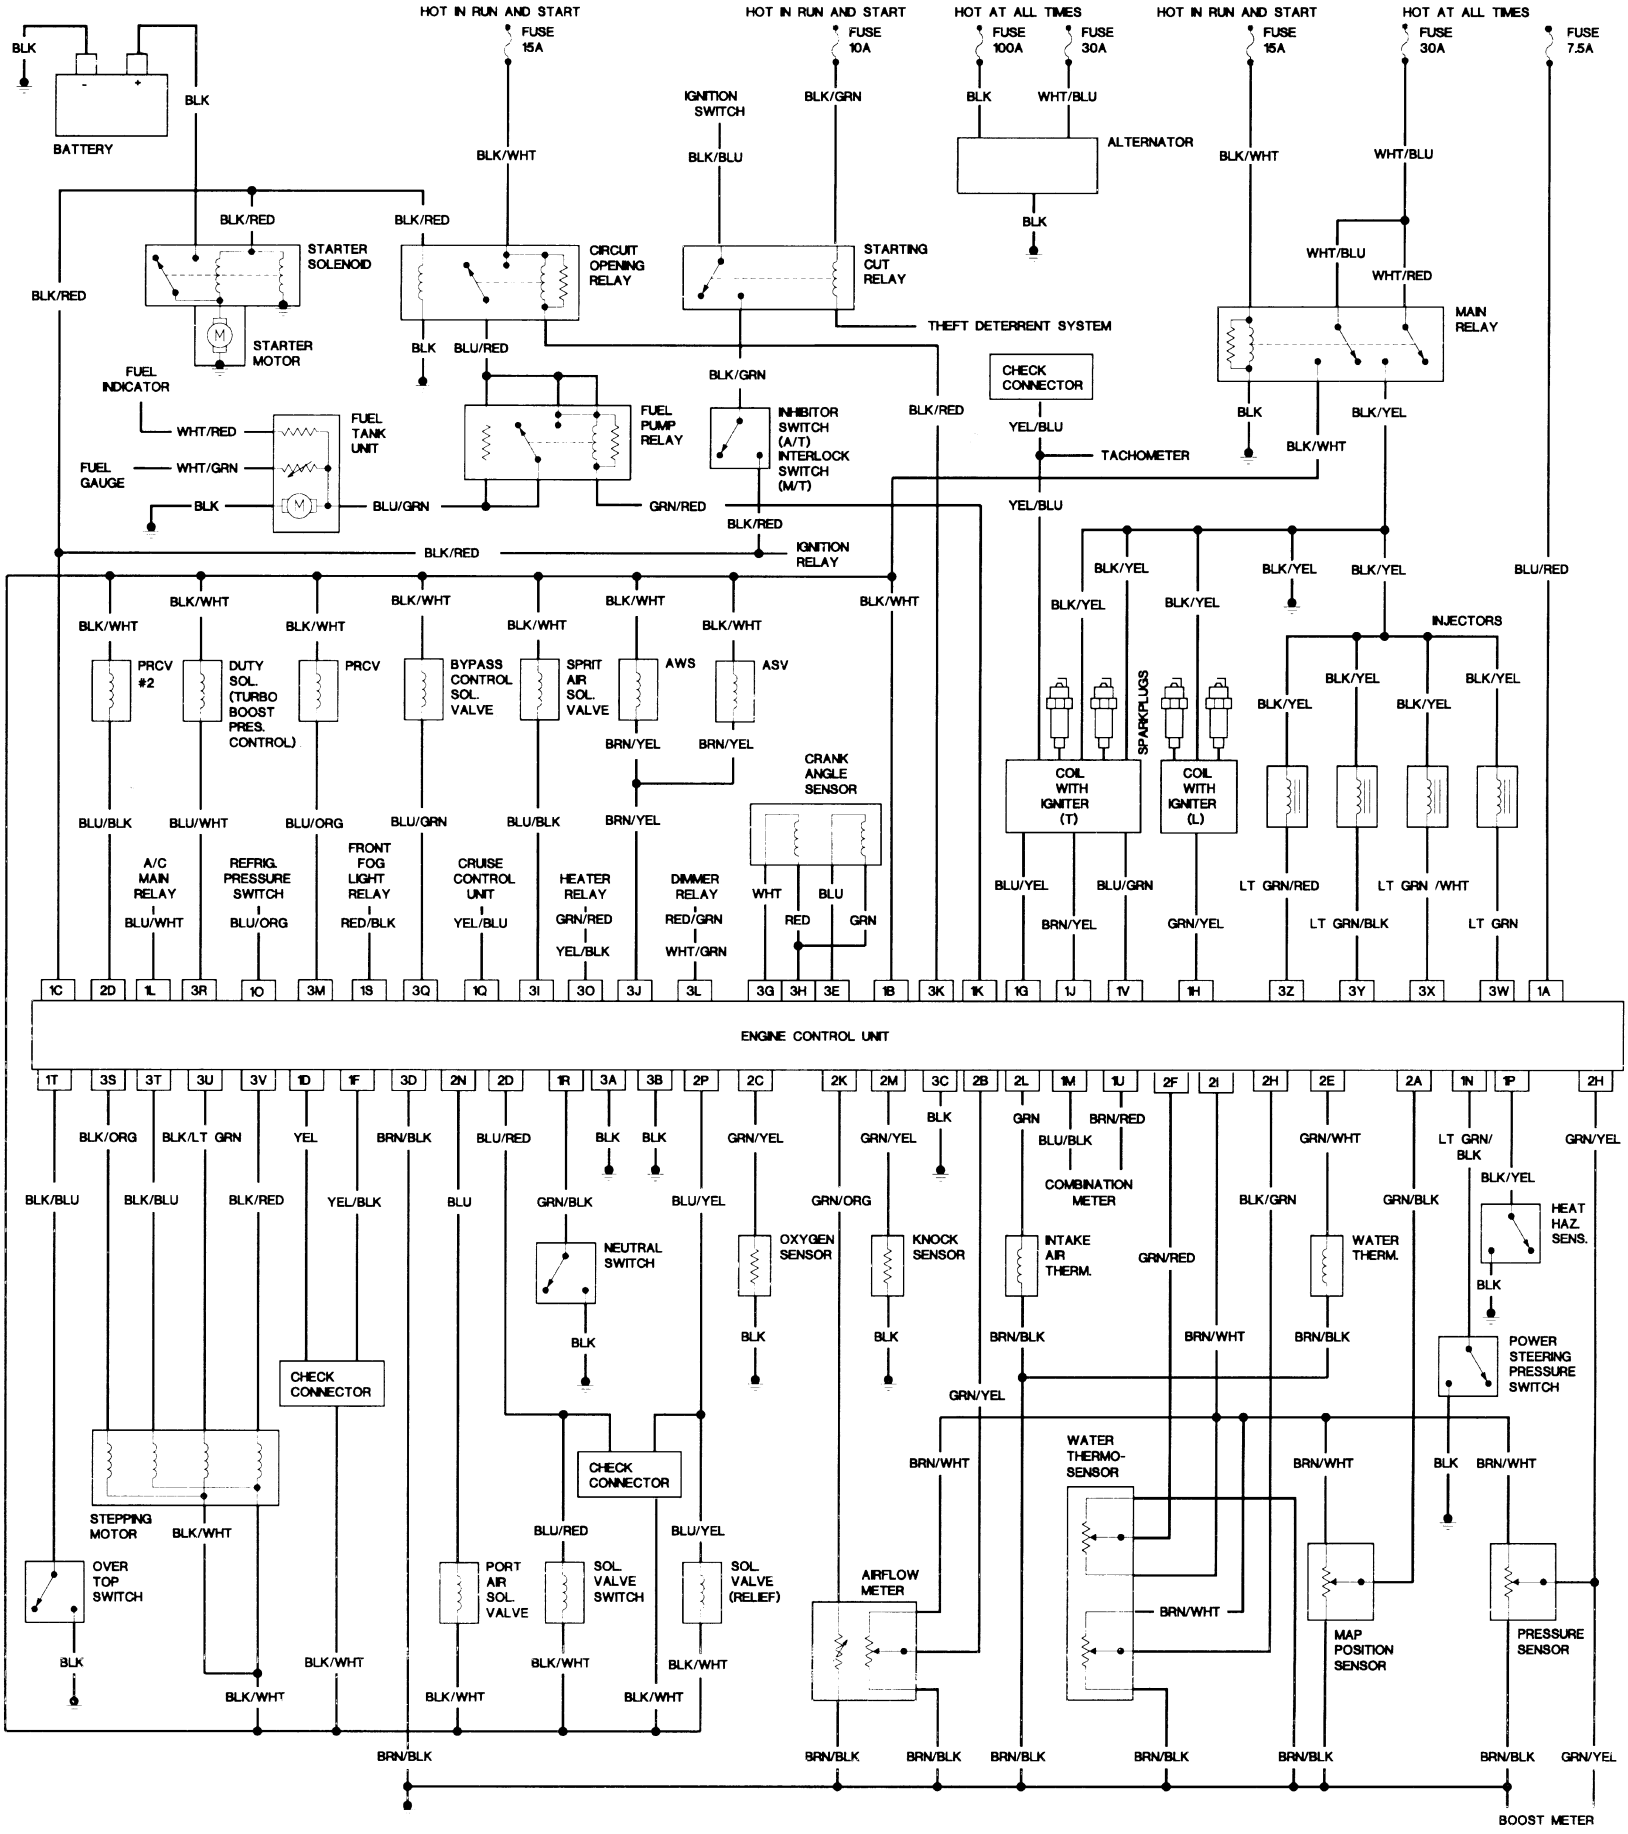
HOT IN RUN AND START
HOT IN RUN AND START
HOT AT ALL TIMES
HOT IN RUN AND START
HOT AT ALL TIMES
FUSE 15A
FUSE 10A
FUSE 100A
FUSE 30A
FUSE 15A
FUSE 30A
FUSE 7.5A
BATTERY
IGNITION SWITCH
ALTERNATOR
STARTER SOLENOID
STARTER MOTOR
CIRCUIT OPENING RELAY
STARTING CUT RELAY
THEFT DETERRENT SYSTEM
MAIN RELAY
FUEL INDICATOR
FUEL GAUGE
FUEL TANK UNIT
FUEL PUMP RELAY
INHIBITOR SWITCH (A/T) INTERLOCK SWITCH (M/T)
CHECK CONNECTOR
TACHOMETER
IGNITION RELAY
INJECTORS
SPARKPLUGS
COIL WITH IGNITER (T)
COIL WITH IGNITER (L)
PRCV #2
DUTY SOL. (TURBO BOOST PRES. CONTROL)
PRCV
BYPASS CONTROL SOL. VALVE
SPRIT AIR SOL. VALVE
AWS
ASV
CRANK ANGLE SENSOR
A/C MAIN RELAY
REFRIG. PRESSURE SWITCH
FRONT FOG LIGHT RELAY
CRUISE CONTROL UNIT
HEATER RELAY
DIMMER RELAY
ENGINE CONTROL UNIT
STEPPING MOTOR
OVER TOP SWITCH
CHECK CONNECTOR
NEUTRAL SWITCH
OXYGEN SENSOR
KNOCK SENSOR
INTAKE AIR THERM.
COMBINATION METER
WATER THERM.
HEAT HAZ. SENS.
POWER STEERING PRESSURE SWITCH
PORT AIR SOL. VALVE
SOL. VALVE SWITCH
SOL. VALVE (RELIEF)
AIRFLOW METER
WATER THERMO-SENSOR
MAP POSITION SENSOR
PRESSURE SENSOR
BOOST METER