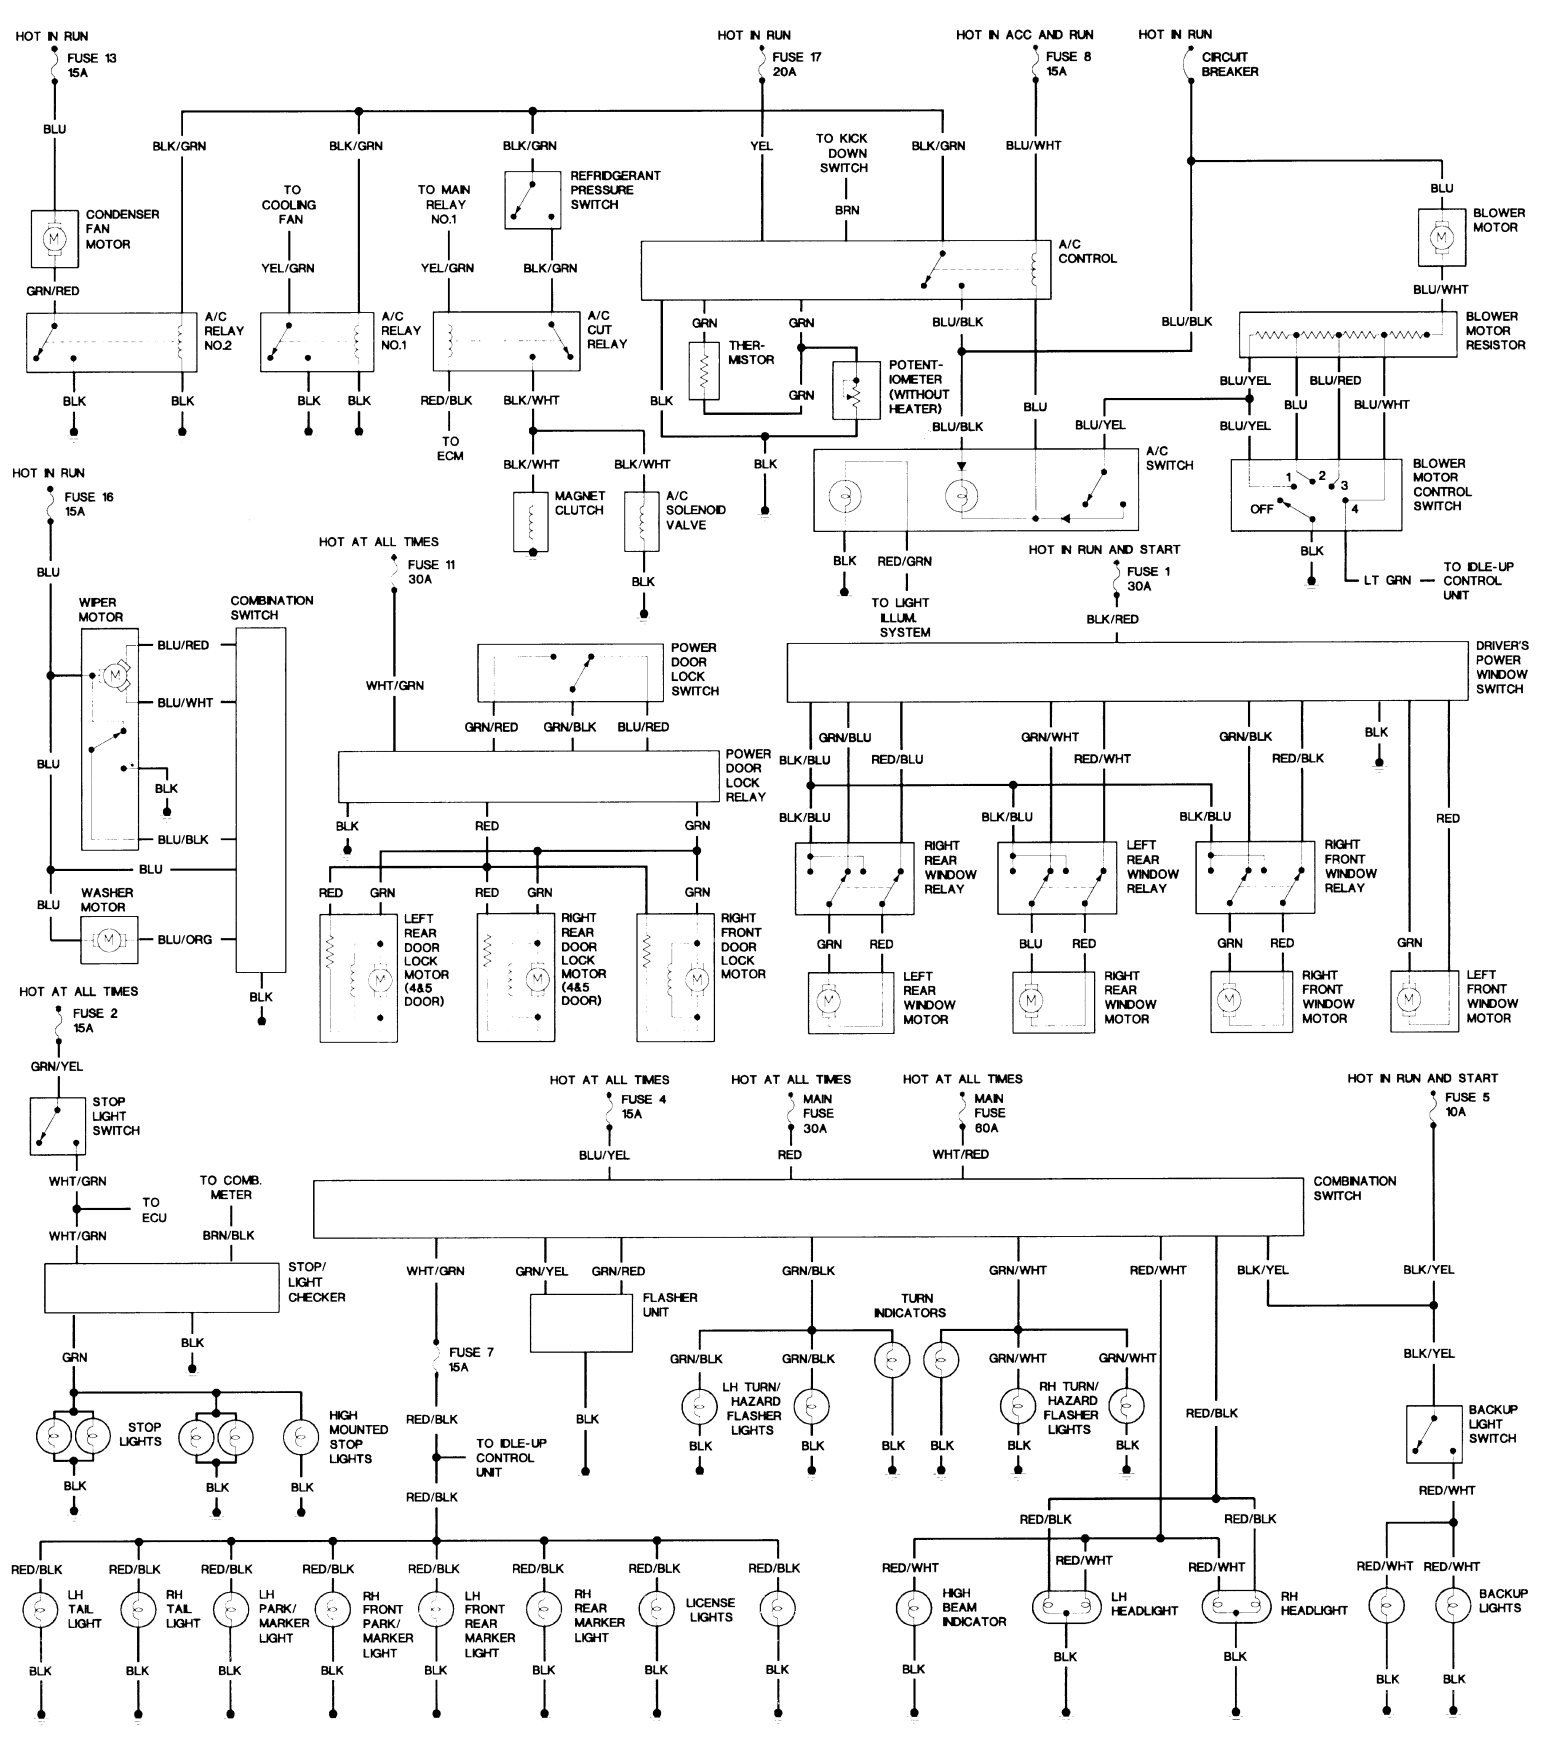
HOT IN RUN
FUSE 13
15A
BLU
CONDENSER FAN MOTOR
GRN/RED
A/C RELAY NO.2
BLK
BLK/GRN
TO COOLING FAN
YEL/GRN
A/C RELAY NO.1
TO MAIN RELAY NO.1
REFRIDGERANT PRESSURE SWITCH
A/C CUT RELAY
RED/BLK
TO ECM
BLK/WHT
MAGNET CLUTCH
A/C SOLENOID VALVE
HOT IN RUN
FUSE 17
20A
YEL
TO KICK DOWN SWITCH
BRN
A/C CONTROL
GRN
THER-MISTOR
POTENT-IOMETER (WITHOUT HEATER)
BLU/BLK
HOT IN ACC AND RUN
FUSE 8
15A
BLU/WHT
HOT IN RUN
CIRCUIT BREAKER
BLOWER MOTOR
BLU/WHT
BLOWER MOTOR RESISTOR
BLU/YEL
BLU/RED
BLU
A/C SWITCH
BLOWER MOTOR CONTROL SWITCH
OFF
LT GRN
TO IDLE-UP CONTROL UNIT
HOT IN RUN
FUSE 16
15A
WIPER MOTOR
COMBINATION SWITCH
BLU/RED
BLU/WHT
BLU/BLK
WASHER MOTOR
BLU/ORG
HOT AT ALL TIMES
FUSE 11
30A
WHT/GRN
POWER DOOR LOCK SWITCH
GRN/RED
GRN/BLK
BLU/RED
POWER DOOR LOCK RELAY
LEFT REAR DOOR LOCK MOTOR (4&5 DOOR)
RIGHT REAR DOOR LOCK MOTOR (4&5 DOOR)
RIGHT FRONT DOOR LOCK MOTOR
HOT IN RUN AND START
FUSE 1
30A
BLK/RED
TO LIGHT ILLUM. SYSTEM
RED/GRN
DRIVER'S POWER WINDOW SWITCH
GRN/BLU
BLK/BLU
RED/BLU
GRN/WHT
RED/WHT
GRN/BLK
RED/BLK
RIGHT REAR WINDOW RELAY
LEFT REAR WINDOW RELAY
RIGHT FRONT WINDOW RELAY
LEFT REAR WINDOW MOTOR
RIGHT REAR WINDOW MOTOR
RIGHT FRONT WINDOW MOTOR
LEFT FRONT WINDOW MOTOR
HOT AT ALL TIMES
FUSE 2
15A
GRN/YEL
STOP LIGHT SWITCH
WHT/GRN
TO ECU
TO COMB. METER
BRN/BLK
STOP/ LIGHT CHECKER
STOP LIGHTS
HIGH MOUNTED STOP LIGHTS
HOT AT ALL TIMES
FUSE 4
15A
BLU/YEL
HOT AT ALL TIMES
MAIN FUSE
30A
RED
HOT AT ALL TIMES
MAIN FUSE
60A
WHT/RED
COMBINATION SWITCH
FUSE 7
15A
GRN/YEL
GRN/RED
FLASHER UNIT
GRN/BLK
TURN INDICATORS
LH TURN/ HAZARD FLASHER LIGHTS
GRN/WHT
RH TURN/ HAZARD FLASHER LIGHTS
RED/WHT
BLK/YEL
HOT IN RUN AND START
FUSE 5
10A
BACKUP LIGHT SWITCH
LH TAIL LIGHT
RH TAIL LIGHT
LH PARK/ MARKER LIGHT
RH FRONT PARK/ MARKER LIGHT
LH FRONT REAR MARKER LIGHT
RH REAR MARKER LIGHT
LICENSE LIGHTS
HIGH BEAM INDICATOR
LH HEADLIGHT
RH HEADLIGHT
BACKUP LIGHTS