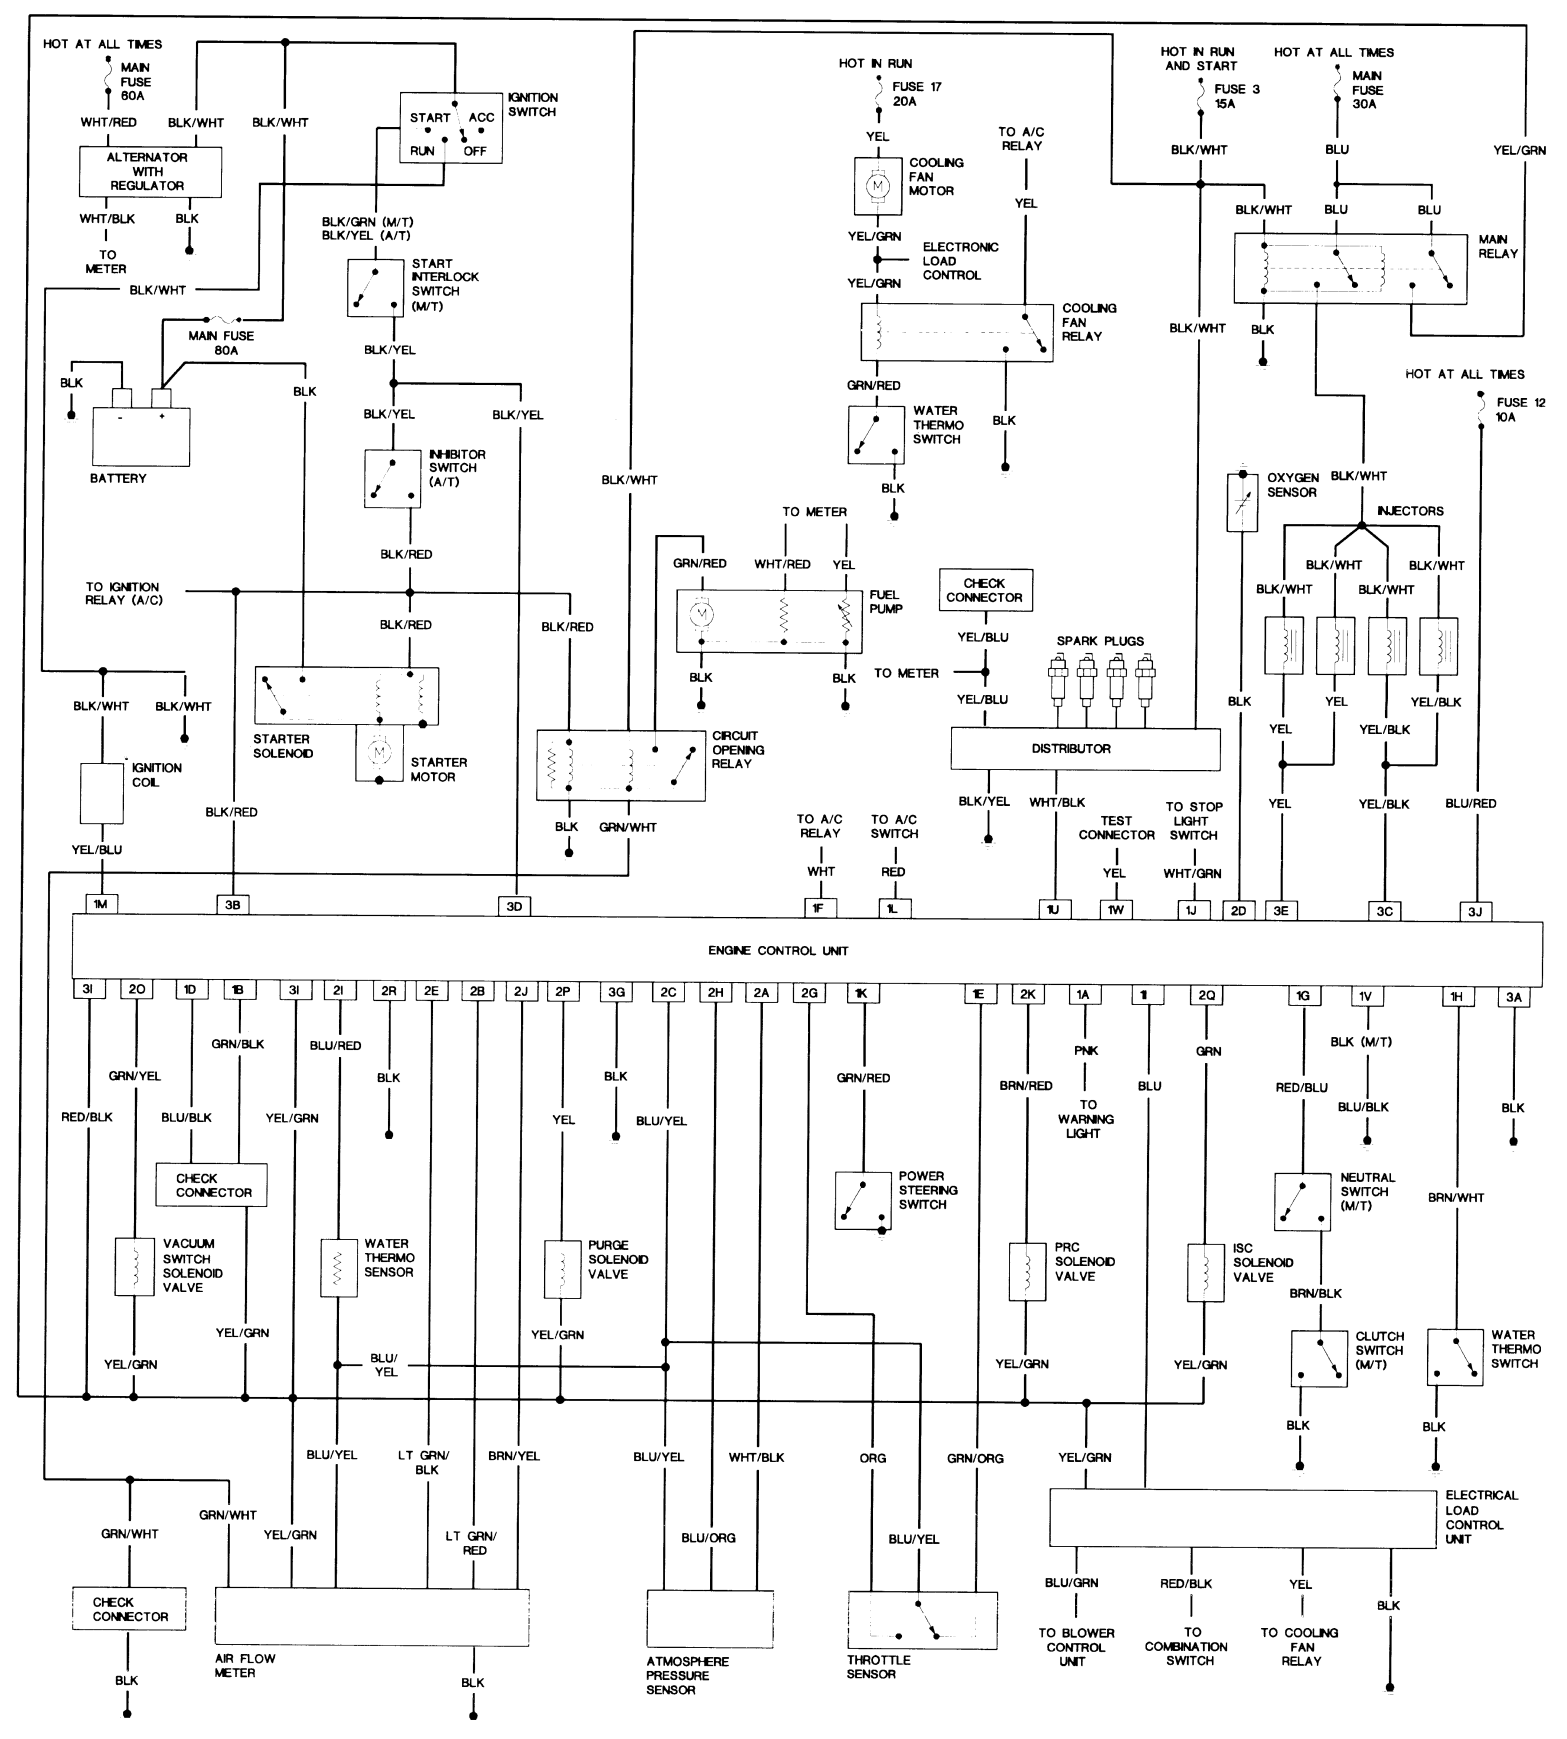
HOT AT ALL TIMES
MAIN FUSE 60A
WHT/RED
BLK/WHT
BLK/WHT
IGNITION SWITCH
START
ACC
RUN
OFF
ALTERNATOR WITH REGULATOR
WHT/BLK
BLK
TO METER
BLK/GRN (M/T)
BLK/YEL (A/T)
START INTERLOCK SWITCH (M/T)
BLK/WHT
MAIN FUSE 80A
BLK
BATTERY
BLK
BLK/YEL
BLK/YEL
INHIBITOR SWITCH (A/T)
BLK/RED
TO IGNITION RELAY (A/C)
BLK/RED
BLK/WHT
BLK/WHT
STARTER SOLENOID
STARTER MOTOR
IGNITION COIL
YEL/BLU
BLK/RED
BLK/RED
BLK/WHT
CIRCUIT OPENING RELAY
BLK
GRN/WHT
HOT IN RUN
FUSE 17 20A
YEL
COOLING FAN MOTOR
YEL/GRN
ELECTRONIC LOAD CONTROL
YEL/GRN
TO A/C RELAY
YEL
COOLING FAN RELAY
GRN/RED
WATER THERMO SWITCH
BLK
BLK
TO METER
GRN/RED
WHT/RED
YEL
FUEL PUMP
BLK
BLK
CHECK CONNECTOR
YEL/BLU
TO METER
YEL/BLU
SPARK PLUGS
DISTRIBUTOR
BLK/YEL
WHT/BLK
TEST CONNECTOR
TO STOP LIGHT SWITCH
YEL
WHT/GRN
TO A/C RELAY
WHT
TO A/C SWITCH
RED
HOT IN RUN AND START
FUSE 3 15A
BLK/WHT
HOT AT ALL TIMES
MAIN FUSE 30A
BLU
YEL/GRN
BLK/WHT
BLU
BLU
MAIN RELAY
BLK/WHT
BLK
HOT AT ALL TIMES
FUSE 12 10A
OXYGEN SENSOR
BLK/WHT
INJECTORS
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK
YEL
YEL/BLK
YEL
YEL/BLK
BLU/RED
1M
3B
3D
1F
1L
1U
1W
1J
2D
3E
3C
3J
ENGINE CONTROL UNIT
3I
2O
1D
1B
3I
2I
2R
2E
2B
2J
2P
3G
2C
2H
2A
2G
1K
1E
2K
1A
1I
2Q
1G
1V
1H
3A
RED/BLK
GRN/YEL
BLU/BLK
GRN/BLK
YEL/GRN
BLU/RED
BLK
YEL
BLK
BLU/YEL
GRN/RED
BRN/RED
PNK
TO WARNING LIGHT
BLU
GRN
RED/BLU
BLK (M/T)
BLU/BLK
BLK
BRN/WHT
CHECK CONNECTOR
VACUUM SWITCH SOLENOID VALVE
WATER THERMO SENSOR
PURGE SOLENOID VALVE
POWER STEERING SWITCH
PRC SOLENOID VALVE
ISC SOLENOID VALVE
NEUTRAL SWITCH (M/T)
CLUTCH SWITCH (M/T)
WATER THERMO SWITCH
YEL/GRN
YEL/GRN
YEL/GRN
BLU/YEL
YEL/GRN
YEL/GRN
YEL/GRN
BRN/BLK
BLK
BLK
BLU/YEL
LT GRN/BLK
BRN/YEL
BLU/YEL
WHT/BLK
ORG
GRN/ORG
YEL/GRN
GRN/WHT
GRN/WHT
YEL/GRN
LT GRN/RED
BLU/ORG
BLU/YEL
ELECTRICAL LOAD CONTROL UNIT
BLU/GRN
RED/BLK
YEL
BLK
CHECK CONNECTOR
BLK
AIR FLOW METER
BLK
ATMOSPHERE PRESSURE SENSOR
THROTTLE SENSOR
TO BLOWER CONTROL UNIT
TO COMBINATION SWITCH
TO COOLING FAN RELAY